

Getting Started Guide

The only warranties for Hewlett-Packard products and services are set forth in the express statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company
P.O. Box 4010
Cupertino, CA 95015-4010
USA

Copyright © 2000, 2003–2005 Hewlett-Packard Development Company, L.P.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright-protection technology must be authorized by Macrovision Corporation and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Apple, iTunes, FireWire, the FireWire symbol, and iPod are trademarks of Apple Computer, Inc., registered in the U.S. and other countries/regions.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

Table of Contents

Setting Up Your PC	1
Putting Your PC Together	1
Connecting to the PC	2
Turning On Your PC for the First Time	3
Setting Up and Connecting to Your Internet Account	4
Installing Software and Hardware Devices.....	5
Using HP products	5
Transferring your old PC information and files to your new PC	5
Using Desktop Icons.....	6
Using HP Organize software.....	6
Using the Keyboard	7
Customizing the keyboard buttons	9
Setting Up Sound	11
Using Speakers	11
Setting up 3-connector sound	12
Configuring multi-channel audio output for the DVD player	13
Setting up 6-connector sound	14
Configuring the Sound Effect Manager (6-connector)	15
Configuring sound for recording with the Sound Effect Manager (6-connector)	16
Using the Sound Effect Manager (6-connector)	17
Using Your PC Top	19
Using Your Docking Bay.....	19
Using Your Multistorage Bay.....	22
Storing CDs, DVDs, or memory cards.....	23
Docking a peripheral device	23
Placing a peripheral device on the multistorage bay (top)	24
Using the optional camera station PC top	25
Removing cables from the multistorage bay cable tunnel	28

Using the Memory Card Reader	29
Working with the Safely Remove Hardware utility	30
Using the memory card reader	30
Using a TV as a Monitor	33
Identifying Cables You May Need	33
Connecting to a TV Set	33
Viewing the PC Image on Your TV Screen	34
nView tab.....	35
Ge Force tab	35
Displays tab.....	36
Disabling the TV Option	36
nView tab (disabling).....	37
Ge Force tab (disabling)	37
Displays tab (disabling).....	37
Disconnecting the TV	38
Using the HP Personal Media Drive	39
Connecting the Drive	39
Inserting the Drive	40
Locating the Drive and Assigning a Drive Letter	41
Using the Drive	42
Disconnecting the Drive.....	43
Working with Digital Images.....	45
Working with Digital Images	45
Using HP Image Zone Plus.....	45
Burning a label on a LightScribe media disc	47
Creating disc labels with HP Image Zone Plus	47
Playing CDs and DVDs	51
Playing Music CDs with iTunes.....	51
Playing CDs and DVDs with Windows Media Player	52
Playing DVD Movies with InterVideo WinDVD	52
Using country/region codes	54
Playing Video CDs (VCD) with InterVideo WinDVD	54
Playing Video CDs (VCD) with Windows Media Player 9	55

Creating Audio and Data Discs	57
Erasing Rewritable Discs Before Recording	58
Working with Audio CDs	58
Verifying audio disc recorded without errors	59
Audio CD tips	59
Creating audio CDs	60
Creating jukebox discs	60
Working with Data DVDs and CDs	61
Verifying data disc recorded without errors	61
Data disc tips	62
Creating data discs	62
Copying a DVD or CD	63
Archiving Files on a CD or DVD	64
Working with Image Files	64
Creating an image file	65
Burning from an image file	65
Disc Labeling with LightScribe	65
LightScribe requirements	66
Burning a LightScribe label with Sonic Express Labeler	66
Burning a LightScribe label after burning with iTunes	67
Using adhesive disc labels	68
Compatibility Information	68
Disc Features and Compatibility Table	69
Optical Drive Quick Reference Table	70
Software Quick Reference Table	71
Creating Video Discs and Movies	73
Before You Begin Capturing Video	73
Sonic MyDVD Video Projects	74
Creating a Video Project	74
Adding files to a video project	75
Capturing video to a video project	75
Adding slide shows to a video project	76
Adding submenus to a video project	76
Editing the style of a video project	77
Editing movie files	77
Burning a video project to disc	78
Creating a Video Project with Direct-to-Disc Wizard	79
Video Quality and Disc Size	80
DVD Recording Time	81

Creating Movies Using muvee autoProducer	83
Basic Steps to Make a Movie.....	83
Locating the muvee autoProducer	84
Using muvee autoProducer	85
Getting started	85
Capturing video from a DV camcorder.....	87
Adding videos	88
Adding pictures.....	89
Adding music	89
Selecting the style.....	90
Changing the settings	90
Adding an opening title and closing credits	91
Making the movie.....	92
Saving the movie project	92
Recording the movie project to disc	93
Upgrading muvee autoProducer	93
Getting Help	95
Finding Onscreen Guides.....	95
Finding Guides on the Web	95
Using the Onscreen Help and Support Center.....	96
Using Updates from HP.....	96
Getting messages	96
Turning off messages	97
Reactivating messages	97
Using PC Help & Tools.....	97
Index	99

Setting Up Your PC



WARNING: Please read “*Safety Information*” in the *Warranty and Support Guide* before installing and connecting your PC to the electrical power system.



WARNING: The power supply is preset for the country/region in which you purchased your PC. If you move, please check the voltage requirements before plugging your PC into an AC power outlet.

Putting Your PC Together

Follow the steps on the quick setup poster to set up your PC.

Look in the PC box for printed details or updates regarding your model PC.

After assembling your PC, but before you begin using it, arrange the PC and your work area to maintain your comfort and productivity. Refer to the Safety & Comfort Guide for important ergonomic information.



WARNING: To reduce the risk of serious injury, read the **Safety & Comfort Guide**. It describes proper workstation setup, posture, and health and work habits for computer users. It also provides important electrical and mechanical safety information.

To view the Safety & Comfort Guide:

- Click **Start**, choose **All Programs**, choose **Documentation**, and then click **Safety & Comfort Guide**.







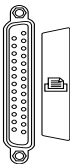

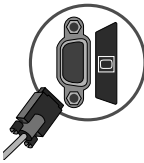


Or




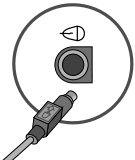




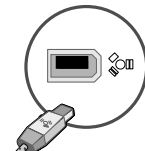

- Type
<http://www.hp.com/ergo/>
into your Web browser address box, and then press Enter on the keyboard.

Your PC features and location, availability, and number of connectors may vary.

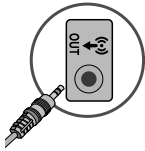Connecting to the PC

Connect your main hardware devices like the monitor, keyboard, and mouse to the back of the PC. Other peripheral devices like a printer, scanner, camera, or other equipment also plug into connectors on the back of your computer. Some PC models also have connectors on the front of the PC. The table does not show all connectors.

Connector	Connector symbol	Description
		Mouse (PS/2 connector)
		Keyboard (PS/2 connector)
		Universal Serial Bus (USB) for mouse, keyboard, digital cameras, or other devices with USB connectors
		Printer (parallel)
		Monitor
	Serial	Serial port for some digital cameras or other serial devices

Connector	Connector symbol	Description
		Audio Line Out (powered speakers)
		Audio Line In
		Headphones
		Microphone
		FireWire® (IEEE 1394) for video cameras or other devices with very fast transfer rates

Turning On Your PC for the First Time

After you have completed the steps on the quick setup poster, you are ready to turn on your PC.

- 1 Press the Power button on the monitor.
- 2 Press the On button on the front of the PC.
- 3 Turn on the speakers, if they are present.
- 4 Click an option to select your language (if applicable for your model). Click **OK**, and then confirm your selection by clicking **Yes**. Wait until the PC makes preparations. (It may take up to 30 minutes for this one-time language setup on the PC.)
- 5 Set up Microsoft® Windows® by following the onscreen instructions.

- 6 Double-click the large **Internet Access** icon, if it is present on your desktop. Wait until the PC displays the Easy Internet Sign-up window, and then follow the onscreen instructions.
- 7 Register your PC.

Setting Up and Connecting to Your Internet Account

Before you can connect to the Internet, you must sign up with an Internet service provider (ISP). HP has made arrangements with leading ISPs to help you sign up for Internet service using Easy Internet Sign-up (available on select models only).

NOTE: You may use any other ISP of your choice, or transfer your existing ISP account to this PC.

Use Easy Internet Sign-up to sign up for a new or transfer an existing ISP account (select ISPs only). The software programs for available ISPs are part of your PC. If you decide to subscribe to high-speed broadband, cable or digital subscriber line (DSL), contact your ISP for any specific software and hardware you may need.

- 1 Make sure the modem or other Internet access cable is connected.

NOTE: Easy Internet Sign-up finds and obtains updated information about ISP services by temporarily connecting to the Internet. The PC uses either the PC modem connected to an active telephone service line or an active broadband (cable or DSL) connection.

- 2 Choose an ISP using Easy Internet Sign-up. To open Easy Internet Sign-up:

- a Double-click the **Easy Internet Sign-up** icon on the desktop.

Or

Click **Start** on the taskbar, choose **All Programs**, choose **Online Services**, and then click **Easy Internet Sign-up**.

- b Follow the onscreen instructions.



NOTE: The folder called *Online Services* includes icons for accessing various online services, but they may not be present in all countries/regions.

- 3 Connect to your ISP and the Internet (after you established your ISP account on this PC).

Use one of these methods:

- Double-click the ISP-provided icon on the desktop.

Or

- Press the Connect (or Internet) button on the keyboard (select models only).

Or



- If your PC is always connected to your ISP, open your browser program, such as Internet Explorer: Click **Start**, choose **All Programs**, choose **Online Services**, and click **Internet Explorer**.

NOTE: If you are using MSN, AOL, or others and have questions, contact the ISP directly.

Installing Software and Hardware Devices

After you turn on the PC the first time, you can install any software programs that came on CDs or DVDs included in the PC box (select models only).

You may wish to install additional software programs or hardware devices on your PC. Before installation, make a restore point using the Microsoft System Restore program, and then restart the PC after installation. By using System Restore, you insure you have a point to return to before an issue occurred. For information about System Restore, refer to the Microsoft Web site at:

<http://www.microsoft.com/worldwide/>

Choose software that is compatible with your PC — check the operating system, memory, and other requirements listed for the new software for compatibility with your PC.

NOTE: Only use original licensed software. Installing copied software may be illegal or may infect your PC with a virus.

Install the new software according to the directions provided by the software manufacturer. Check the manufacturer's documentation or customer service information for help if you need it.

For antivirus software, uninstall the existing software program before reinstalling it or installing a new antivirus program.

Using HP products





HP computers include preloaded software for select HP All-In-One, camera, scanner, and printer peripheral products. Preloaded software simplifies and speeds product setup for HP peripherals. Simply connect the HP peripheral product, turn it on, and your HP PC automatically configures it so it is ready to use.

Transferring your old PC information and files to your new PC

See the built-in Microsoft Windows Help and Support Center; search for *transfer wizard*, and select the overview article, "Files and Settings Transfer Wizard overview." This information describes a Microsoft solution for moving your files onto your new PC.

Using Desktop Icons

The desktop has shortcut icons that make it easy to find the things you need.

Icon	Opens	Use it to
	Help and Support (select models only)	View onscreen Help information about your PC.
	Easy Internet Sign-up	Set up a new or an existing Internet account.
	HP Image Zone Plus	Manage and protect your still photos, scanned images, and video clips.
	HP Organize (select models only)	Organize your PC shortcuts and your favorite Internet destination links.

Using HP Organize software

HP Organize software (select models only) is a desktop tool you use to organize both your PC shortcuts and your favorite Internet destination links. You use it to organize the important things you do on the PC and the Internet and to arrange them the way you want. HP Organize makes all your information available with just a few mouse clicks.

HP Organize looks like a window with multiple category frames. Each category has links to Internet destinations or shortcuts to software programs or files on your PC. Use the player area for viewing pictures, for listening to your MP3 music files stored on your computer, or for watching video clips. For searching, there is a search bar at the top of HP Organize where you can select the search engine you want to use.

To open HP Organize:

Double-click the desktop icon.

Or

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **HP**.
- 4 Click **HP Organize**.









Using the Keyboard







 


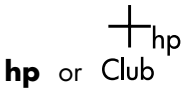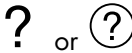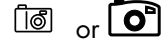
















Your keyboard has an arrangement of standard keys, indicator lights, and special buttons (select models only).

Identifying Special Keyboard Buttons

There are special buttons (select models only) at the top of the keyboard. (Some models have some of these special buttons on the left side of the main keys.) These buttons operate a CD or DVD player, connect you to the Internet, or provide quick access to specific functions.

NOTE: The number, location, and labeling of buttons vary by keyboard model.

Icon	Feature	Description
	Standby	Puts PC into power-saving mode (screen is blank but PC is still on). To make screen reappear, press the Esc key, or press Standby again. May take 10–30 seconds before screen reappears.
	User	Switches between the PC users.
	HP	Links to an HP Web site.
	Help	Opens the Help and Support Center.
	Pictures (Photos)	Opens an imaging software program. Can be reconfigured.
	Music	Starts iTunes or Windows Media Player. Can be reconfigured.

 Icon	Feature	Description
	Video	Opens video software program. Can be reconfigured.
 or 	Shopping	Goes to popular Web sites. Can be reconfigured to open a site or software program.
 or 	Sports	
 or 	Finance	
 or 	Connect, Internet	
 or 	Search	
 or 	Chat	
	E-Mail	
A  B  or Burn CD/DVD C  D  E  F 	Media controls (CD/DVD/MP3)	<p>Operates a disc player.</p> <p>A Open and close disc tray B Record C Play or pause D Stop E Skip to the previous track F Skip to the next track</p>
 	Volume control (Volume knob or Volume Up and Volume Down buttons)	<p>Volume knob: Increases speaker volume when turned clockwise and decreases volume when turned counterclockwise. It can be turned indefinitely, even after maximum sound has been reached.</p> <p>Volume Up and Down buttons: Press the Volume Up  button to increase volume and the Volume Down  button to decrease volume.</p>
 or 	Mute	Turns speaker sound on and off.

NOTE: The number, location, and labeling of buttons vary by keyboard model.

Customizing the keyboard buttons

You can customize some of the special buttons on the keyboard (select models only) to open different programs or files or to connect to favorite Web sites:

- 1** Click **Start** on the taskbar.
- 2** Choose **Control Panel**.
- 3** Click **Printers and Other Hardware**, if it is present.
- 4** Double-click **Keyboard**.
- 5** On the Buttons tab, double-click the button you want to change.
- 6** For the Button configuration, click the **Down arrow** to the right of the list and choose the button capability, such as *Simple web page with label*.
- 7** Enter a display label and the address information. For a Web page, enter the URL.
- 8** Click **OK**.
- 9** On the Buttons tab, click **Apply**.
- 10** Repeat steps 5 through 9 for each button you want to customize.
- 11** Click **OK** to finish.

NOTE: Clicking the **Restore Defaults** button on the Button tab restores all of the Internet buttons to the factory settings.



Setting Up Sound

Using Speakers

Speakers are included with the monitor (select models only) or are sold separately. Your PC supports only an active (powered) speaker system; the speaker system must have its own power cord.

NOTE: A *stereo speaker set* is a left-right, two-channel speaker system. A *multi-channel audio speaker system* is a system with more than two channels, and it may include a subwoofer. For example, 7.1 channels, referred to as an eight-speaker mode, uses two front speakers (left-right), two side speakers (left-right), two rear speakers (left-right), a center speaker, and a subwoofer.

 
NOTE: If your PC includes a sound card (select models only), refer to the documentation that came with the sound card.

The PC supports a variety of sound options and speaker configurations. You may set up your PC for two stereo speakers or for multi-channel audio speaker systems. Connect your speaker system to the PC, and then configure the audio software for sound output. For details on connecting stereo speakers to the PC, see the quick setup poster. Location, availability, and number of connectors may vary.

- If your PC model includes three sound connectors (select models only) on the back of the PC, see “Setting up 3-connector sound” on page 12.



- If your PC model includes six sound connectors (select models only) on the back of the PC, see “Setting up 6-connector sound” on page 14.

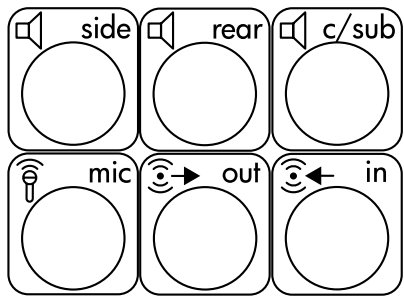




Setting up 3-connector sound

PC models that include three sound connectors (select models only) on the back of the PC support up to six channels of sound (5.1 speaker output) and use the Multi-channel Sound Manager to configure the software settings.

Connecting the speaker system to the PC (3-connector)

The 3-connector audio speaker system uses the Audio In, Audio Out, and Mic connectors on the back or front of the PC. Refer to the quick setup poster for the location of the connectors.

- 1 With the speaker system off, assemble the speakers and, if used, the subwoofer. Refer to the speaker documentation.
- 2 Turn off the PC.
- 3 Connect the three audio cable plugs from the speaker system to the connectors on the back of the PC. (See the following table.)

Connect speaker plugs for:			To PC connector	Connector icon
2 Speaker Mode	4/4.1 Speaker Mode	6/5.1 Speaker Mode		
Front speakers	Front speakers	Front speakers	Audio Out (lime green)	
Not used for speakers	Rear speakers	Rear speakers	Audio In (blue)	
Not used for speakers	Not used for speakers	Center/subwoofer speakers	Mic-1 (pink)	

- 4 Turn on the PC.
- 5 Turn on the speaker system.
- 6 Configure the audio output for this 3-connector multi-channel speaker system by performing the following procedure.

Configuring the Multi-Channel Sound Manager (3-connector)

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.

- 3 Click **Multi-channel Sound Manager**. The Multi-channel Audio Configuration window opens.

NOTE: If you do not see the Speaker Configuration tab, your PC does not have the multi-channel capability. However, it still has two-channel (stereo) output.

- 4 Click the **Speaker Configuration** tab.
- 5 Select the option describing the number of speakers in your system, for example, **6/5.1 speaker mode**. You can click the **Speaker Test** tab and then click a speaker icon to test it.
- 6 Click **OK**.

To use a microphone for recording, see “Using the microphone with the Multi-Channel Sound Manager (3-connector)” on page 13.

To hear DVD movies recorded with multi-channel audio from all speakers, change the audio properties for WinDVD to match your speaker configuration (if your InterVideo WinDVD program supports more than two channels). Refer to “Configuring multi-channel audio output for the DVD player” on page 13.

Using the microphone with the Multi-Channel Sound Manager (3-connector)

The 3-connector multi-channel speaker system (select models only) connects to the PC using the Microphone, Audio (Line) In, and Audio (Line) Out connectors on the back of the PC. Your PC may have a second microphone connector on the front of the PC. If present, this microphone connector is ready to use and does not affect the use of the multi-channel audio speaker system.

To use the microphone connector on the back of the PC with a 3-connector multi-channel audio speaker system, you must disconnect the cables for the multi-channel speakers and change the audio configuration to a two-channel audio system. Refer to “Configuring the Multi-Channel Sound Manager (3-connector)” on page 12 to set the audio configuration.

Configuring multi-channel audio output for the DVD player

The InterVideo WinDVD program (select models only) is set up for two-speaker (stereo) output. To hear all speakers from DVD movies recorded with multi-channel audio, change the audio properties for WinDVD to match your speaker configuration (if your InterVideo WinDVD program supports more than two channels):

- 1 Insert a DVD, or start InterVideo WinDVD. (Click **Start**, choose **All Programs**, choose **InterVideo WinDVD**, select **InterVideo WinDVD Player**, and then click **InterVideo WinDVD**.) The WinDVD video window opens.
- 2 Right-click anywhere in the WinDVD video window, and then click **Setup**. The Setup window opens.

- 3 Click the **Audio** tab.
- 4 Click the option for the number of speakers to match your multi-channel speaker system.

NOTE: When using the digital out connector for sound (6-connector, select models only), select **Digital (S/PDIF) out to External Processor**.

- 5 Click **Apply**.

NOTE: To test the speakers (multi-channel speakers only), click the **Test** button. The WinDVD control panel shows the speaker number being used. Click **Stop**.

- 6 Click **OK**.

NOTE: If you want to play a stereo DVD, change the audio properties of WinDVD to match the recorded DVD audio output.

Setting up 6-connector sound

PC models that include six sound connectors (select models only) on the back of the PC, support up to eight channels of sound (7.1 speaker output) and use the Sound Effect Manager to configure the software settings.

 
Identifying the audio connectors (6-connector)

The PC supports a maximum of eight speakers in a multi-channel speaker system by using four of the six audio connectors on the back of the PC.

This PC also has digital audio out and digital audio in connectors for digital sound devices such as a DVD recorder or a digital stereo receiver/amplifier.

The four connectors (**A**, **B**, **C**, and **E**) for the 6-connector multi-channel speaker system are on the back of the PC.

- A** Side speaker port (side)
- B** Rear speaker port (rear)
- C** Center speaker/subwoofer port (c/sub)
- D** Microphone (mic)
- E** Audio line out (out) for front speakers
- F** Audio line in (in)

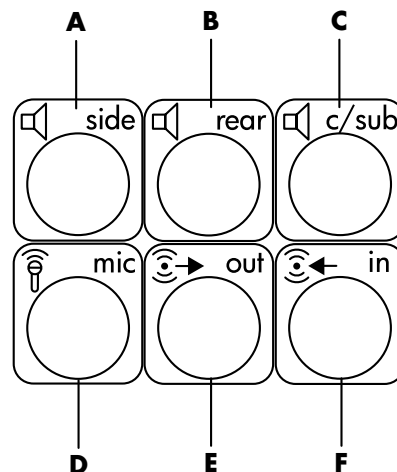

The previous figure shows the six audio connectors arranged on the back of the PC: the four connectors (**A**, **B**, **C**, and **E**) used for eight-channel audio and the connectors for the microphone (**D**, mic) and the audio line in (**F**, in).

Connecting the speaker system to the PC (6-connector)

- 1 With the speaker system off, assemble the speakers and, if used, the subwoofer. Refer to the speaker documentation.
- 2 Turn off the PC.
- 3 Connect the audio cable plugs from the speaker system subwoofer to the connectors on the back of the PC. (See the following table.)

Connect speaker cable (plug) for:	To PC port (label, name, color):
Front speakers (or two stereo speakers)	Audio line out (E , out, lime green)
Side speakers	Side speaker (A , side, gray)
Rear speakers	Rear speaker (B , rear, black)
Center speaker/subwoofer	Center speaker/subwoofer (C , c/sub, gold)

- 4 Turn on the PC.
- 5 Turn on the speaker system.
- 6 Configure the audio output for this 6-connector multi-channel speaker system by performing the following procedure.

Configuring the Sound Effect Manager (6-connector)

- 1 Click **Start** on the taskbar.
- 2 Choose **Control Panel**.
- 3 If it is present, click **Sounds, Speech, and Audio Devices**.
- 4 Click **Sound Effect Manager**. The window opens.
- 5 Click the **Speaker Configuration** button.
- 6 Select the option describing the number of speakers in your system, for example, **7.1 speakers**.

A connector with no descriptive text in the Connection Guide indicates that the connector is not used for the selected speaker configuration.

NOTE: You can click the **Speaker Test** button to test the speakers.

- 7 Click **OK**.

To hear DVD movies recorded with multi-channel audio from all speakers, change the audio properties for WinDVD to match your speaker configuration (if your InterVideo WinDVD program supports more than two channels). Refer to “Configuring multi-channel audio output for the DVD player” on page 13.

To use a microphone or set up the PC for recording, see “Configuring sound for recording with the Sound Effect Manager (6-connector)” on page 16.

To use the other features of the Sound Effect Manager, see “Using the Sound Effect Manager (6-connector)” on page 17.

Configuring sound for recording with the Sound Effect Manager (6-connector)

The microphone connector on the front of the 6-connector audio PC is ready to use for recording sound. If you want to use another connector for recording, such as the digital audio in connector, use these steps to select it.

NOTE: The pink and green connectors on the front of a PC with 6-connector sound can be retasked to perform other audio functions; refer to “Using the Audio Wizard in the Sound Effect Manager (6-connector)” on page 18.

- 1** Click **Start** on the taskbar.
- 2** Choose **Control Panel**.
- 3** If it is present, click **Sounds, Speech, and Audio Devices**.
- 4** Click **Sounds and Audio Devices**.
- 5** Click the **Audio** tab.
- 6** In *Sound recording* select the default device from the drop-down list. Choose:
 - **RealTek HD Front Pink Jack** to use the microphone connector on the front of the PC.
 - **RealTek HD Digital Input** to use the digital audio in connector on the back of the PC.
 - **RealTek HD Front Green Jack** to use the green connector on the front of the PC.
 - **Back Line in/Mic, Front Line in** to use the audio line in (in) or the microphone (mic) connectors on the back of the PC, or to use the audio line in connector on the front of the PC.

NOTE: For this selection, the audio line in connector is ready to use. To use the back mic connector, follow the steps in “Selecting the Back Line in/Mic, Front Line in connectors for recording (6-connector)” that follows this procedure.

- 7** Click **Apply**, and then click **OK** to close the window.

Selecting the Back Line in/Mic, Front Line in connectors for recording (6-connector)

Perform these steps when you select **Back Line in/Mic, Front Line in** for the sound recording in step 6 of the previous procedure.

NOTE: If you want to record from the mic connector on the back of the PC, you must perform these steps.

- 1 Click **Start** on the taskbar.
- 2 Choose **Control Panel**.
- 3 If it is present, click **Sounds, Speech, and Audio Devices**.
- 4 Click **Sounds and Audio Devices**.
- 5 On the Volume tab, in the *Device volume* area click the **Advanced** button. The Master Volume window opens.
- 6 Click **Options** and choose **Properties**.
- 7 In the *Mixer device* area, select **Back Line in/Mic, Front Line in** from the drop-down list. Click **OK**.
- 8 The recording control window opens and shows *Line In 1 or 2* selected. The line in connector you plug into is used. However, to use the mic connector on the back of the PC, click the **Select** check box under *Microphone* so a check mark appears in the box.

Using the Sound Effect Manager (6-connector)

The Sound Effect Manager has four buttons that display its control screens.

To open the Sound Effect Manager:

- 1 Click **Start** on the taskbar.
- 2 Choose **Control Panel**.
- 3 If it is present, click **Sounds, Speech, and Audio Devices**.
- 4 Click **Sound Effect Manager**. The window opens.
- 5 Click a button near the top of the window to see that control screen.

The Sound Effect Manager control screens:

- **Sound Effect** — selects the Environment and the Equalizer settings. You can select an Environment, such as *Under Water* or *Auditorium*. To use the Equalizer, click the Power button in the center of the circular equalizer control to turn on the Equalizer. You can click a preset button, such as *Pop* or *Live*, or manually adjust the settings and then save them for easy selection later.
- **Speaker Configuration** — selects the number of speakers, shows the Connection Guide, and has the Speaker Test button to test the speakers. A connector with no descriptive text in the Connector Guide indicates that the connector is not used for the selected speaker configuration.

- **Digital Audio** — selects the digital audio output and digital audio frequency for the digital audio connectors on the PC.
- **Audio Wizard** — opens a window that shows the connector panel on the front of the PC. To close the window without enabling the wizard, click **OK**.

 
To enable the Audio Wizard:

Make sure the **Enable auto detection** check box is selected to enable the wizard. Click **OK** to close the window.

Using the Audio Wizard in the Sound Effect Manager (6-connector)

When you click the **Audio Wizard** button, a window opens that shows the three audio connectors on the front of the PC.

NOTE: The connectors on the front of your PC may be of a different type or may be in a different arrangement; look for the connector icon and color. Location, availability, and number of connectors may vary.

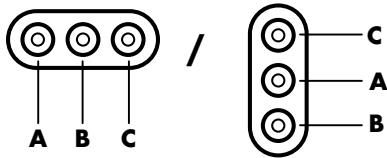

Connector	Name	Icon	Color
A	Audio Line In		Light blue
B	Microphone		Pink
C	Headphones Or Audio Line Out	Or	Lime green

Retasking using the Audio Wizard (6-connector)

With the Audio Wizard enabled, both the microphone connector (**B**) and the headphones connector (**C**) on the front of the PC can be *retasked* to perform a different audio function. These two connectors are universal audio jacks. When you plug in a cable, the Wizard asks you to select the function for the cable from a list, and then it sets the universal audio jack to perform as the selected function. The functions are:

- Stereo speaker (out)
- Microphone (in)
- Headphone (out)
- Audio line in

 
Using Your PC Top

Your PC may have a storage area (select models only) on the top of the PC chassis. For more information:

- See "Using Your Docking Bay" on page 19.
- See "Using Your Multistorage Bay" on page 22.

Using Your Docking Bay

Your PC may have a docking bay (select models only) on the top of the PC chassis.

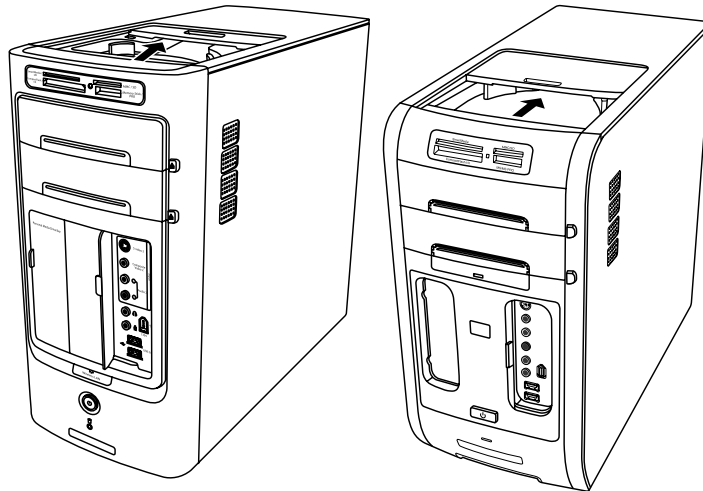

You can use the docking bay to:

- Store CDs, DVDs, or memory cards.
- Dock a peripheral device in the bay, such as a digital camera docking station.
- Install a special cover (optional) and an HP camera and HP camera docking station. (Both the camera and the docking station are sold separately.)
- Install a special cover (optional) and an iPod Dock for use with an iPod, a portable music player. (Both iPod and iPod Dock are sold separately.)

The bay design allows you to place a device and thread the USB or FireWire (IEEE 1394) data cable and the power cord underneath the rear top cover to the connectors on the back of the PC.

 
Your PC may look different from the ones shown here. Components and location, availability, and number of connectors may vary.

To store CDs, DVDs, or memory cards:

Gently press down on the bay lid and slide it open.


To install a peripheral device, an iPod Dock, or an HP camera and HP camera docking station:

- 1 Gently press down on the bay lid and slide it open.
- 2 Place the peripheral device, the iPod Dock (**H**), or the camera docking station (**A**) on the top of the PC.

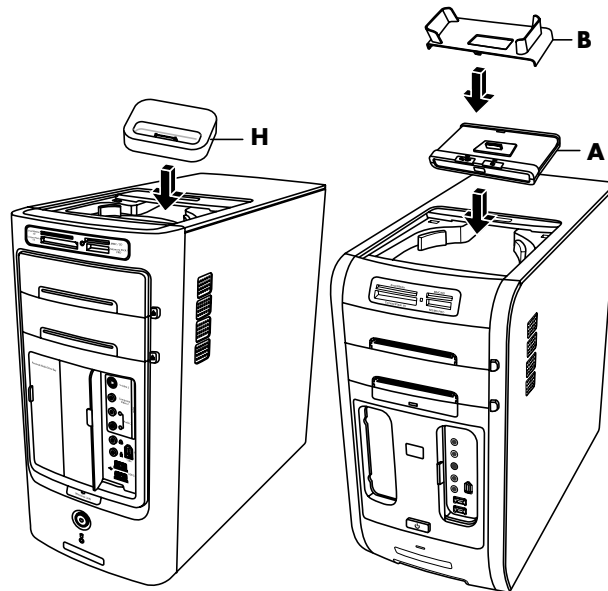


- 3 For a camera, place the camera cradle (**B**) that came with the digital camera on the camera docking station. The cradle clips onto the camera docking station.

 - 4** Thread the cables that came with your peripheral device, iPod Dock (**K**) or camera docking station (**C**) through the cable tunnel; starting from the back of the PC, thread them to the front of the PC. Pull the cables to the center and connect them to the peripheral or the docking station.

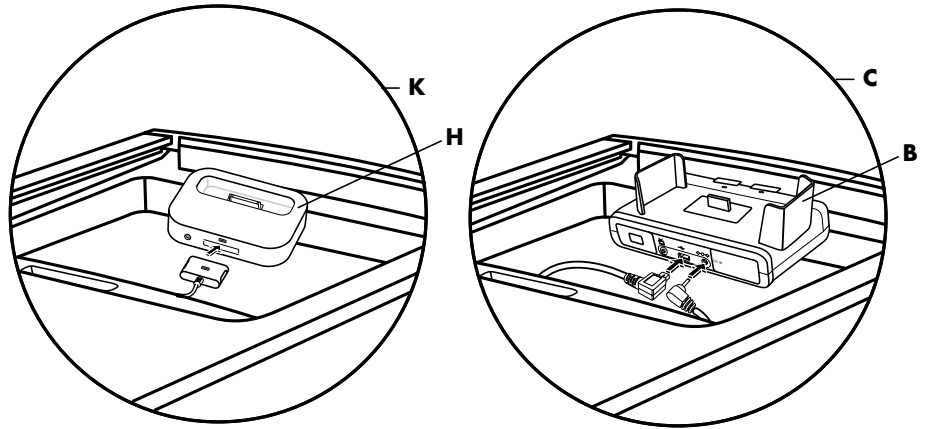

 - 5** Connect the cables to the back of the PC or to a power outlet.

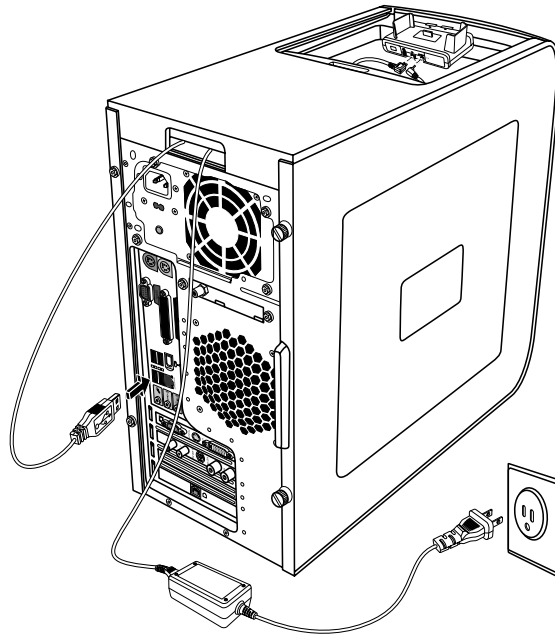

For a peripheral, refer to the instructions that came with your peripheral device.
For an iPod Dock, connect the iPod cable to the USB. Refer to the documentation that came with your iPod.

 
For an HP camera docking station:

- Plug the USB cable into the back of the PC.
- Plug the power cord into a power outlet.

Optionally, if you want to view the camera images on a TV, plug the red and yellow connectors (not shown) into the TV.

Refer to the instructions that came with the HP camera docking station.

- 6 Place the iPod Dock lid (**L**) or the correct camera docking station lid (**D**) on top of the PC. Gently guide the edge of the lid into the top of the PC.

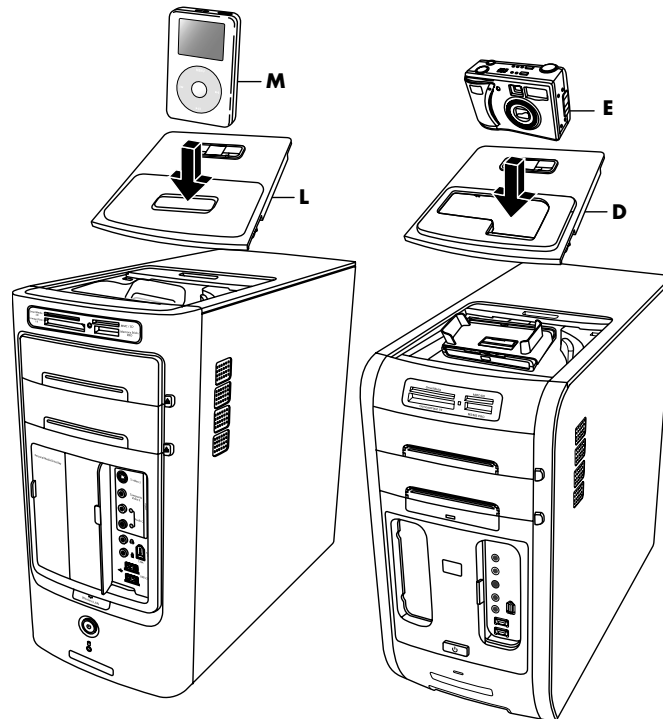

- 7 When you want to use it, place the iPod (**M**) or the HP digital camera (**E**) into the docking station.
- 8 Follow the instructions that came with your peripheral or docking station.

Using Your Multistorage Bay

 
Your PC may have a multistorage bay (select models only) on the top of the PC chassis. You can use the multistorage bay to:

- Store CDs, DVDs, or memory cards.
- Dock a peripheral device in the bay, such as a digital camera docking station.
- Place a peripheral on the top of the chassis.
- Install the special cover and an HP camera and HP camera docking station (both sold separately).

The bay design allows you to place a device and thread the USB or FireWire (IEEE 1394) data cable and the power cord underneath the rear top cover to the connectors on the back of the PC. If you have problems inserting or removing cables in the cable tunnel, remove the rear top cover as described at the end of this section.

Your PC may look different from the one shown here. Components and location, availability, and number of connectors may vary.

Multistorage bay chassis figure 1

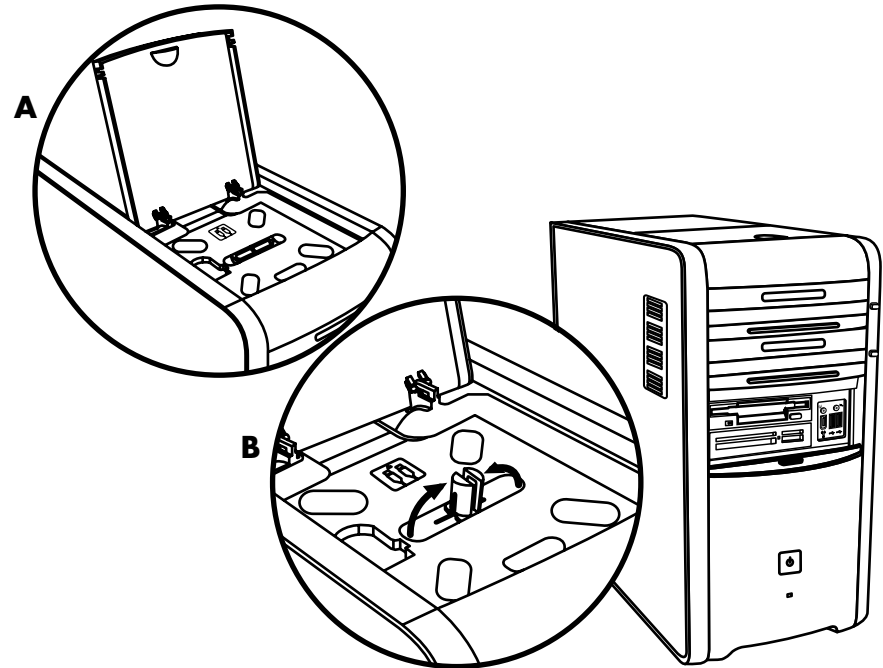

Storing CDs, DVDs, or memory cards

To store CDs and DVDs, open the bay cover (**A** in multistorage bay chassis figure 1) and gently lift the two sections to form the spindle (**B** in figure 1). You can store up to ten discs.

 
To store memory cards, open the top cover and, if necessary, lower the two spindle sections (**A** in figure 1).

Docking a peripheral device

To use the multistorage bay for a peripheral device, do the following:

- 1** Open the bay cover (**A** in figure 1). Hold the cover on each side near the hinges, and then lift the cover and slide it toward the back of the chassis (**C** in figure 2). Gently lift it off.

Multistorage bay chassis figure 2

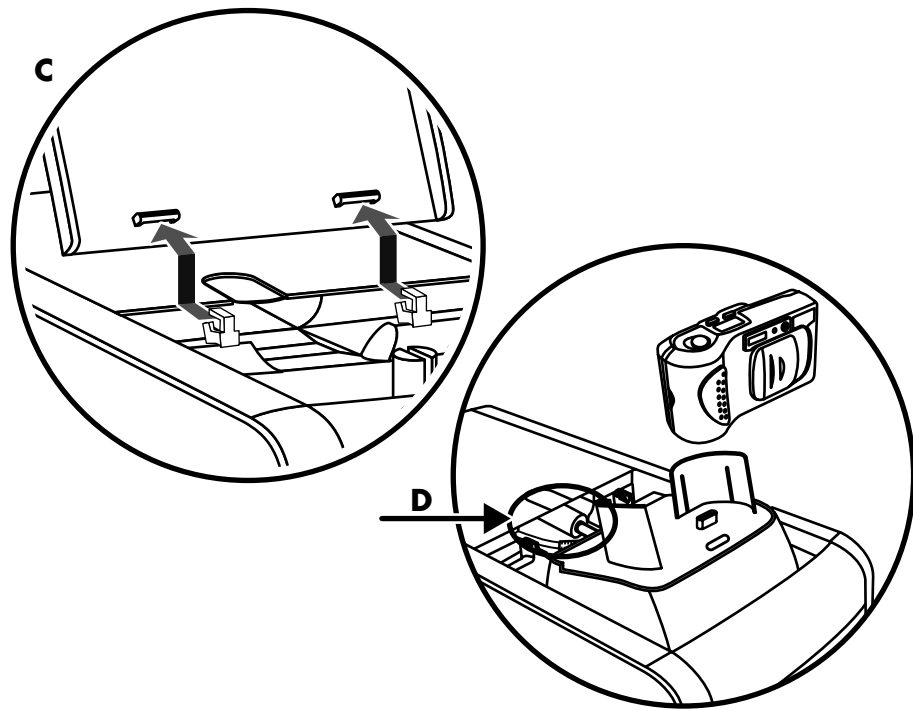

- 2 Thread the cables through the cable tunnel opening at the back of the bay (**D** in figure 2). Connect data and power cables to the peripheral device, and place the peripheral in the bay.
- 3 Connect the data cable to the USB or FireWire (IEEE 1394) connector on the back of the PC. Plug the power cord for the peripheral device into a power outlet.

 
Placing a peripheral device on the multistorage bay (top)

To use the chassis top to place a peripheral device, do the following:

- 1 Open the bay cover (**A** in figure 1). Hold the cover on each side near the hinges, then lift the cover and slide it toward the back of the chassis (**C** in figure 2). Gently lift it off.
- 2 Grasp the tab (**T** in figure 3) and pull it out toward the front of the chassis (**E** in figure 3). Put the tab in its storage area in the bay near the spindle (**F** in figure 3).
- 3 Thread the data and power cables for the device through the cable tunnel opening at the back of the bay. Place the cables in the tab opening and replace the bay cover. Close the cover.

- 4** Connect the cables to the device and place it on top of the chassis (**G** in figure 3). Connect the data cable to the USB or FireWire (IEEE 1394) connector on the back of the PC. Plug the power cord for the peripheral device into a power outlet.


Multistorage bay chassis figure 3

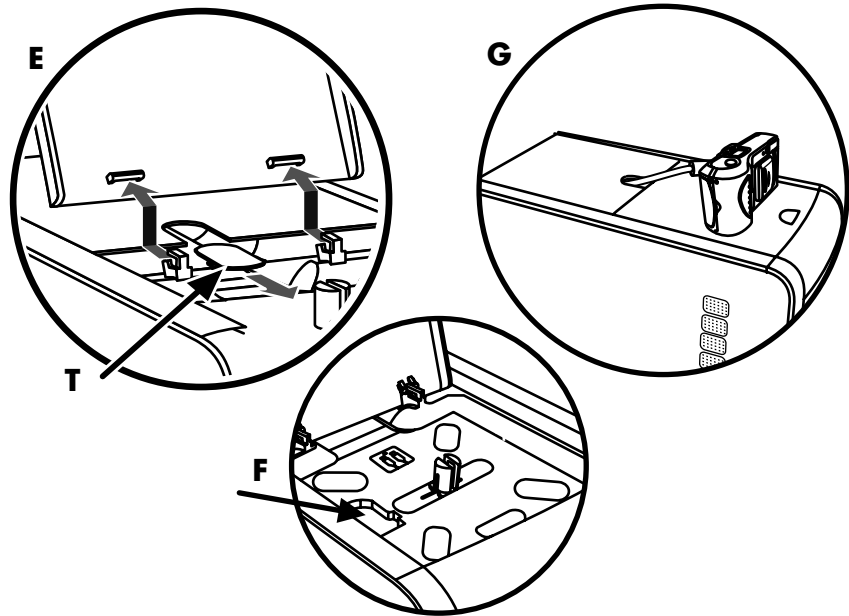

Using the optional camera station PC top

Your PC chassis may include the optional camera docking station feature.

 Multistorage bay chassis figure 4

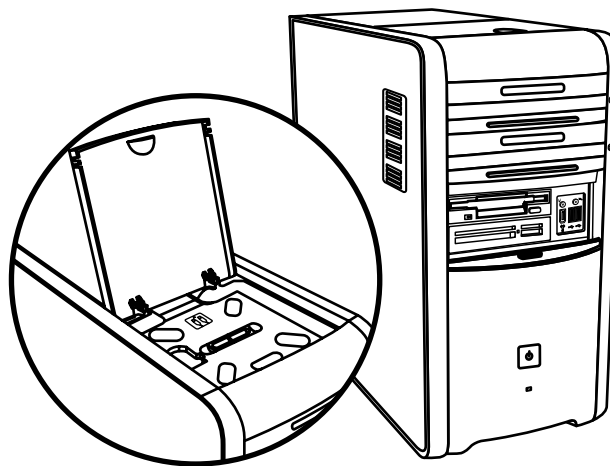

This feature lets you install a special bay cover (optional) on the PC chassis for using an HP camera and HP camera docking station. (Both the camera and the docking station are sold separately.) The camera includes a camera cradle, and the docking station includes cables.

 
This topic describes how to:

- Install the special bay cover on your PC chassis.
- Assemble the camera cradle (included with the camera), and position it on the docking station.
- Place the docking station into the chassis bay, and thread the cables.
- Insert the camera.

- 1 Open the bay cover (**A** in figure 1). Hold the cover on each side near the hinges, then lift the cover and slide it toward the back of the chassis (**C** in figure 1). Gently lift it off.


To make it easy to insert the cables during step 3, grasp the tab (**T** in figure 5) and pull it out toward the front of the chassis (**E** in figure 3). Replace the tab after threading the cables.

Multistorage bay chassis figure 5

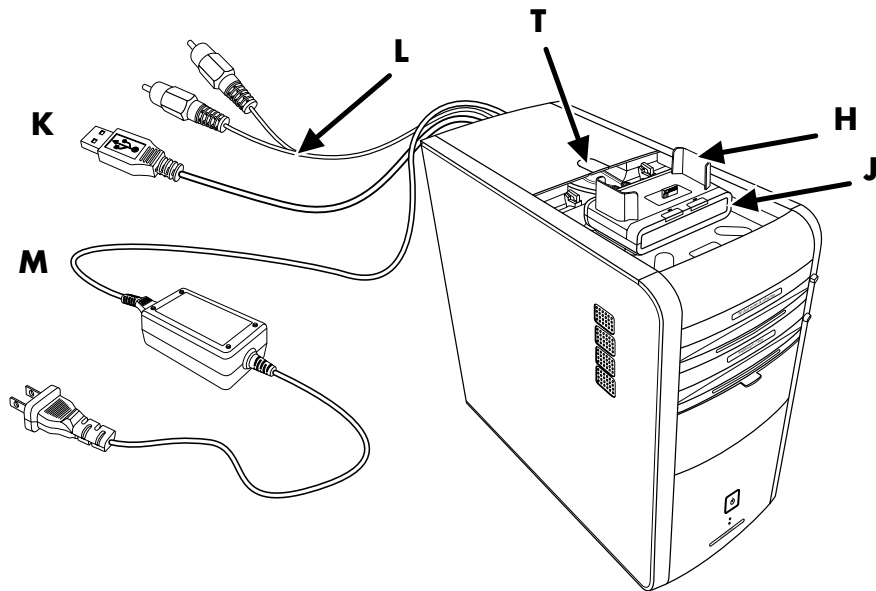


- 2 Place the camera cradle (**H** in figure 5) (included with the camera) onto the docking station (**J** in figure 5).
- 3 Place the docking station into the bay. Thread the data cables (**K** and **L** in figure 5) and power cable (**M** in figure 5) through the cable tunnel opening at the back of the bay and connect them to the docking station.
- 4 Put the new cover on the cover hinges (**P** in figure 6). Close the cover over the docking station.

 Multistorage bay chassis figure 6

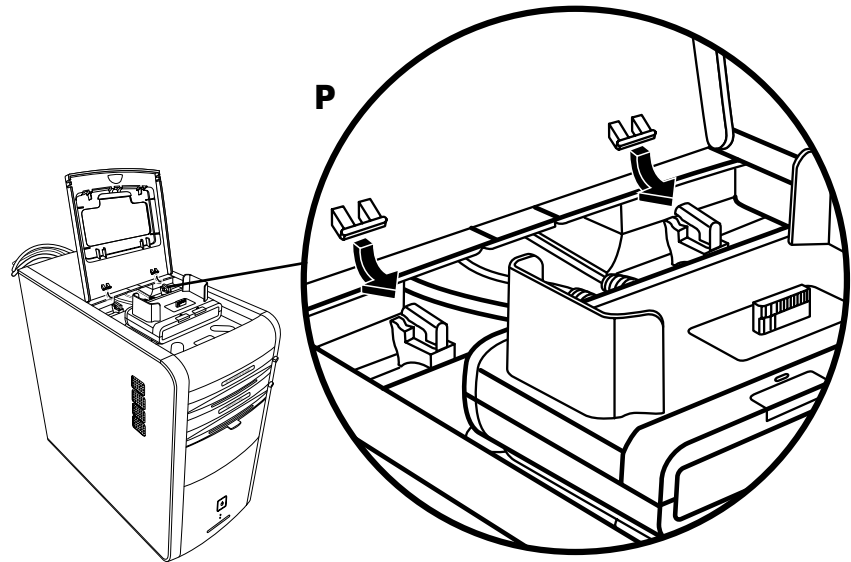

- 5** Connect the docking station cables:
 - Plug the USB cable (**K** in figure 5) into the back of the PC.
 - Plug the red and yellow connectors (**L** in figure 5) into a TV if you want to view the camera images on a TV.
 - Plug the power cord (**M** in figure 5) into a power outlet.
- 6** Insert the camera: Hold the camera over the camera cradle (**R** in figure 7) with the viewer window toward the front of the PC, and lower the camera onto the cradle.

 Multistorage bay chassis figure 7

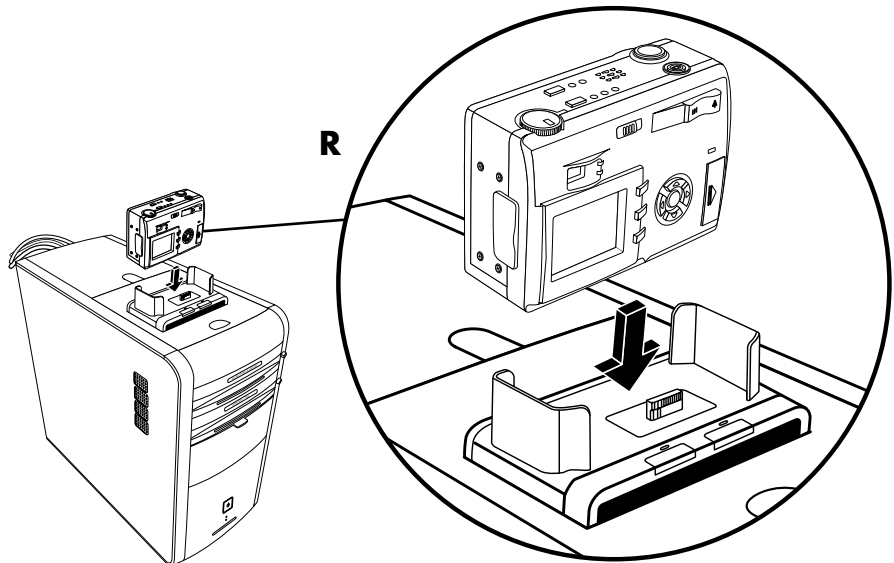


Removing cables from the multistorage bay cable tunnel

If you cannot remove the cable for an external device from the multistorage bay cable tunnel, remove the rear top cover:

- 1 Open the bay cover. Hold the cover on each side near the hinges, and then lift the cover and slide it toward the back of the chassis. Gently lift it off.
- 2 Press the tab (**A** in figure 8) inside the bay and slide the top rear cover toward the back of the chassis; then lift off the cover.

 Multistorage bay chassis figure 8

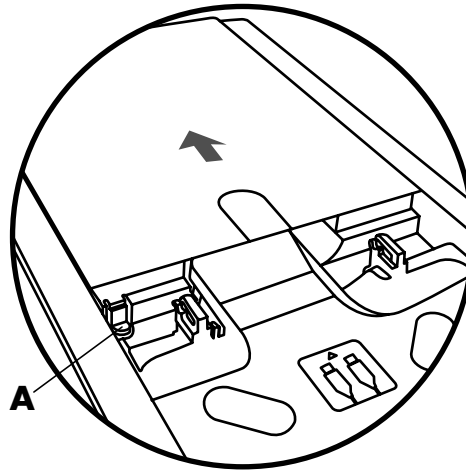

Using the Memory Card Reader

Digital cameras and other digital imaging devices use memory cards, or *media*, to store digital picture files. The optional memory card reader (select models only) can read and write to a variety of types of memory cards and the IBM Microdrive disk drive.

The card reader is accessible directly on the front of the PC or located inside a cover. It has two or four horizontal card slots, which accept the memory cards and the Microdrive disk drive.

Card	4-slot reader	2-slot reader
CompactFlash Type I media	Lower-left slot	Upper slot
CompactFlash Type II media	Lower-left slot	Upper slot
IBM Microdrive disk drive	Lower-left slot	Upper slot
Secure Digital (SD) Memory Card	Upper-right slot	Lower slot
MultiMediaCard (MMC)	Upper-right slot	Lower slot
Memory Stick (MS) Memory Card	Lower-right slot	Lower slot
Memory Stick (MS-Pro) Memory Card	Lower-right slot	Lower slot
SmartMedia (SM) Memory Card	Upper-left slot	Lower slot
xD media	Upper-left slot	Lower slot

You can place media in one or more of the card slots and use each media independently. Place only one piece of media in a slot at one time.

Each card slot has its own drive letter and icon. When you insert media, the display label may change to the title of the media, if the title is present.

Working with the Safely Remove Hardware utility



CAUTION: Do not click **Stop** in the Safely Remove Hardware window with the USB Mass Storage Device selected. Doing so removes the operating system recognition of the memory card reader from your PC; you must restart the PC to see your memory card reader again.

If you open the Safely Remove Hardware window by mistake, click **Close**.

Using the memory card reader

NOTE: CompactFlash and Microdrive are keyed and cannot be inserted incorrectly. Insert the receptacle edge (holes) of this media into the slot.

For the two-slot reader, the Secure Digital (SD) card, the MultiMediaCard (MMC), and the Memory Stick (MS or MS-Pro) cards must be inserted upside down (gold connector fingers facing up). Note the direction of the notched corner on the media.

 
- 1** Insert the media into the card slot until it stops. The activity light **(A)** on the memory card reader lights, and the PC automatically detects the media.
- 2** The PC opens a window so you can use the media contents. You can copy files from or to the media.
- 3** When you are finished, right-click the drive icon, select **Eject**, check that the activity light is on but not blinking, and then remove the media. A steady activity light indicates that the PC is not reading or writing the media.



WARNING: Do not try to remove media when the activity light is blinking; doing so may cause loss of data.

- A** Activity light
- B** Upper-left slot
- C** Lower-left slot
- D** Upper-right slot
- E** Lower-right slot

4-slot memory card reader

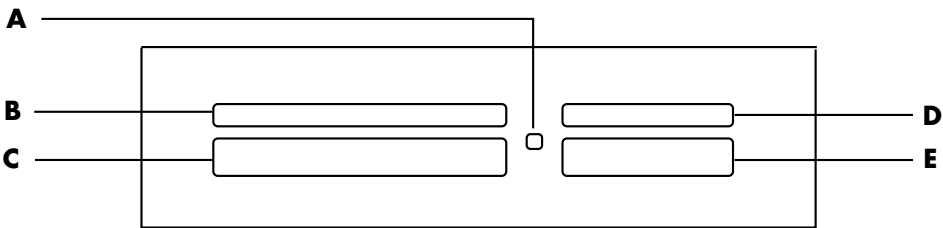


Card	Insert	Into 4-slot reader
CompactFlash Type I media	Receptacle edge (holes)	C (lower-left)
CompactFlash Type II media	Receptacle edge (holes)	C (lower-left)
IBM Microdrive disk drive	Receptacle edge (holes)	C (lower-left)
Secure Digital (SD) Memory Card	Facing up	D (upper-right)
MultiMediaCard (MMC)	Facing up	D (upper-right)
Memory Stick (MS) Memory Card	Facing up	E (lower-right)
Memory Stick (MS-Pro) Memory Card	Facing up	E (lower-right)
SmartMedia (SM) Memory Card	Facing up	B (upper-left)
xD media	Facing up	B (upper-left)

- A** Activity light
- F** Upper slot
- G** Lower slot

2-slot memory card reader

Powered by
Dazzle*

 CompactFlash I/II

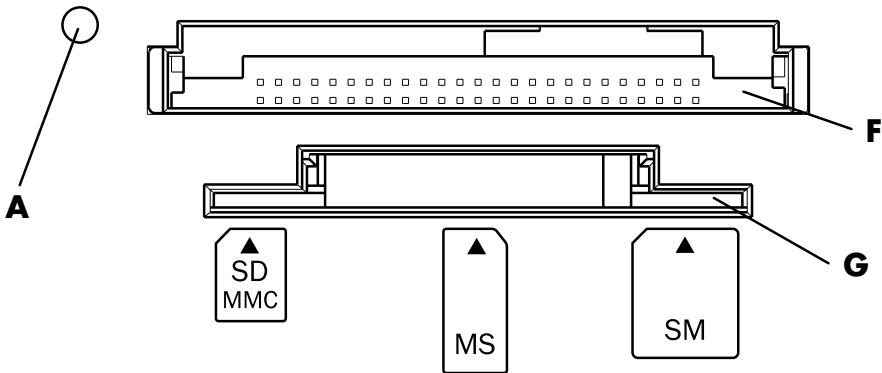

Card	Insert	Into 2-slot reader
CompactFlash Type I media	Receptacle edge (holes)	F (upper)
CompactFlash Type II media	Receptacle edge (holes)	F (upper)
IBM Microdrive disk drive	Receptacle edge (holes)	F (upper)
Secure Digital (SD) Memory Card	Upside down (gold connector fingers up)	G (lower)
MultiMediaCard (MMC)	Upside down (gold connector fingers up)	G (lower)
Memory Stick (MS) Memory Card	Upside down (gold connector fingers up)	G (lower)
Memory Stick (MS-Pro) Memory Card	Upside down (gold connector fingers up)	G (lower)
SmartMedia (SM) Memory Card	Facing up	G (lower)
xD media	Facing up	G (lower)

Using a TV as a Monitor

Your PC may have TV-out (select models only) capability, which means you can connect it to a television to view the computer image on a TV screen. With the TV-out feature, you can view the computer image, watch DVD movies (if you have a DVD player), or play games on your TV.

Identifying Cables You May Need

To connect a TV to the PC, you may need a video cable and an audio cable (not provided; purchase separately). The type of video cable you need depends on your TV:

 
- If your TV has an S-video jack, you need an S-video cable.
- If your TV has a composite video jack, you need a composite video cable and, depending on the jacks on the back of your PC, you may also need an S-video adapter cable.

Connecting to a TV Set

To use your TV as a PC screen:


- 1 Turn off the PC.
- 2 Connect the TV cable using one of the following arrangements, depending on the connection jacks on your TV:
 - If your TV has an S-video jack, connect an S-video cable from the S-video In jack on the TV to the S-video jack on the back of the PC.

A S-video cable
B S-video jack
C Back of PC

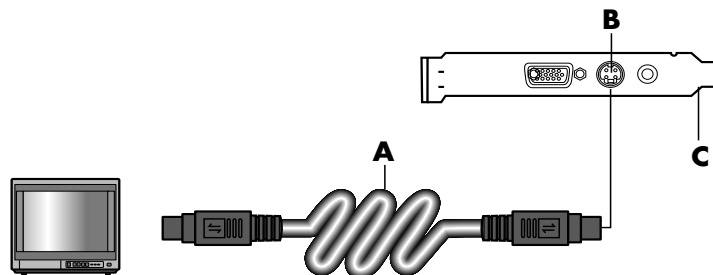


- D** Composite video cable
- E** Composite jack
- C** Back of PC

 - If your TV has a composite video jack and your PC has a composite video jack, connect a composite video cable to the Video In jack on the TV to the composite video jack on the back of the PC.

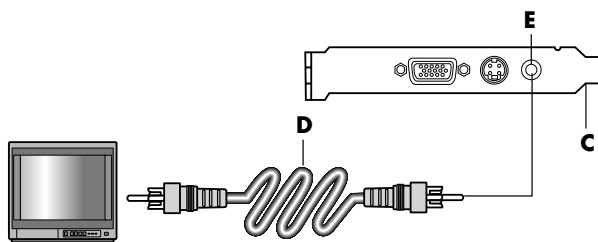

- D** Composite video cable
- F** S-video adapter cable
- B** S-video jack
- C** Back of PC

 - If your TV has a composite video jack and your PC has only an S-video jack, connect a composite video cable to the Video In jack on the TV and to an S-video adapter cable. Connect the S-video adapter cable to the S-video jack on the back of the PC.

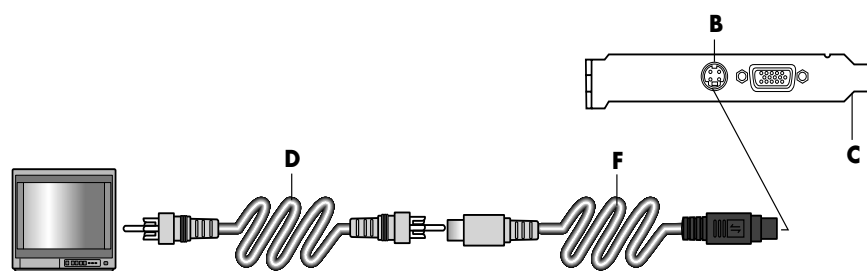

NOTE: The S-video adapter cable is only needed if there is no composite video jack on the back of the PC.

- 3 To have sound come from your TV instead of from your PC, plug an audio cable into the audio input jack (Audio Line In) on the TV and plug the other end of the audio cable into the Audio Out jack (green connector) on the back of the PC.

Viewing the PC Image on Your TV Screen

NOTE: The type of video card on your PC determines how the PC selects the TV-out option. Some options and menus in this procedure may be different for your PC.

- 1 Make sure the video and audio cables are connected before you turn on the TV and the PC.
- 2 Turn on the TV. Press the Video/TV button on your remote control to select the Video setting, not the TV setting.
- 3 Turn on your PC.

- 4** When the Windows desktop appears, right-click an empty area of the desktop and choose **Properties**. The Display Properties window opens.
- 5** Click the **Settings** tab.
- 6** Click the **Advanced** button.
- 7** Look at the tabs, and follow the steps that apply to your PC:
 - If you see the *nView* tab, continue with “*nView* tab.”
 - If you see the *Ge Force FX xxxx* tab, continue with “*Ge Force* tab.” (*FX xxxx* is the video card number.)
 - If you see the *Displays* tab, continue with “*Displays* tab.”

nView tab

- 1** Click the **nView** tab.
- 2** To view the computer image on your PC monitor and your TV simultaneously, in the *nView Display Mode* area select **Clone**.
Or
To view the PC image on just the TV, in the *nView Display Mode* area, select **Standard [Dualview]**, click the **Device Settings** button, choose **Select Output Device**, and then select the **TV** option.
- 3** Click the **OK** button.
- 4** When the PC image appears on the TV screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 5** Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

Ge Force tab

- 1** Click the **Ge Force FX xxxx** tab.
- 2** To view the computer image on your PC monitor and your TV simultaneously, in the *nView Modes* area select **Clone** from the drop-down list.
Or
To view the PC image on just the TV, in the *nView Modes* area select **Single display** from the drop-down list, and then, if necessary, in the *Current display* area select **TV** from the drop-down list.
- 3** Click the **Apply** button.
- 4** When the PC image appears on the TV screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 5** Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

Displays tab

- 1 Click the **Displays** tab. This tab shows a monitor and a TV. Some PCs (select models only) show a TV for standard television and an HDTV for high-definition television. The upper-left corner of each display icon is a button and a status indicator. A red corner indicates an inactive display; a green corner indicates an active display.

NOTE: Your TV must be connected to the PC to change the display.

- 2 To view the computer image on your PC monitor and your TV simultaneously, click the upper-left corner of the TV icon so that it is green. Click **Apply**.
Or
To view the PC image on just the TV, click the TV corner so it is green, and then click the monitor corner so it is red. Click **Apply**.
- 3 When the PC image appears on the TV screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 4 Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

NOTE: Some PC models can connect more than one display device (CRT monitor, flat panel monitor, TV, and so on) to the PC. You can change where the PC desktop appears by pressing Alt+F5. (Press the Alt key and the F5 key on the keyboard at the same time.) Each time you press the Alt+F5 key combination, the PC desktop appears on the next device. If Alt+F5 does not work, restart the PC and try again.

Disabling the TV Option

When you want to disconnect the TV from your PC, you may need to disable the TV option to return your PC display to its original resolution.

- 1 Right-click an empty area of the screen, and choose **Properties**. The Display Properties window opens.
- 2 Click the **Settings** tab.
- 3 Click the **Advanced** button.
- 4 Look at the tabs, and follow the steps that apply to your PC:
 - If you see the nView tab, continue with "nView tab (disabling)."
 - If you see the Ge Force FX xxxx tab, continue with "Ge Force tab (disabling)."
 - If you see the Displays tab, continue with "Displays tab (disabling)."

nView tab (disabling)

- 1 Click the **nView** tab.
- 2 If you viewed the computer image on your PC monitor and your TV simultaneously, select *nView Display Mode* in the list on the left, and then select the **Standard [Dualview]** option.
Or
If you viewed the PC image on just the TV, select *nView Display Mode* in the list on the left, select **Standard [Dualview]**, click the **Device Settings** button, choose **Select Output Device**, and then select the **Analog Display** option.
- 3 Click the **OK** button.
- 4 When the PC image appears on the monitor screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 5 Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

Ge Force tab (disabling)

- 1 Click the **Ge Force FX xxxx** tab.
- 2 In the *nView Modes* area select **Single display** from the drop-down list. In the *Current display* area select **Analog Display** or **Digital Display**.
- 3 Click the **Apply** button.
- 4 When the PC image appears on the monitor screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 5 Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

Displays tab (disabling)

 
- 1 Click the **Displays** tab. This tab shows a monitor and a TV. (Select models show a monitor, a standard TV, and an HDTV.) The upper-left corner of each display icon is a button and a status indicator. A red corner indicates an inactive display; a green corner indicates an active display.
- 2 Click the upper-left corner of the TV icon so it is red, and then click the upper-left corner of the monitor icon so it is green. Click the **Apply** button.
- 3 When the PC image appears on the monitor screen, click **Yes** to keep the setting. You have 15 seconds to accept this new setting before it reverts to the previous setting.
- 4 Click the **OK** button to save changes, and then click **OK** again to close the Display Properties window.

Disconnecting the TV

- 1** Disable the TV option. See the previous procedure.
- 2** Turn off the TV and the PC.
- 3** Remove the video cable from the TV and the PC.
- 4** Remove the audio cable from the TV and the PC.
- 5** Reconnect your PC speaker cable to the Line Out jack (lime-green connector) on the back of the computer.

Using the HP Personal Media Drive

The HP Personal Media Drive (sold separately) can be used as an internal or external USB hard disk drive designed to quickly and easily increase your storage capacity and to transfer media files such as digital photos, music, videos, and other important files. You can also use the HP Personal Media Drive to back up other drives on your PC.

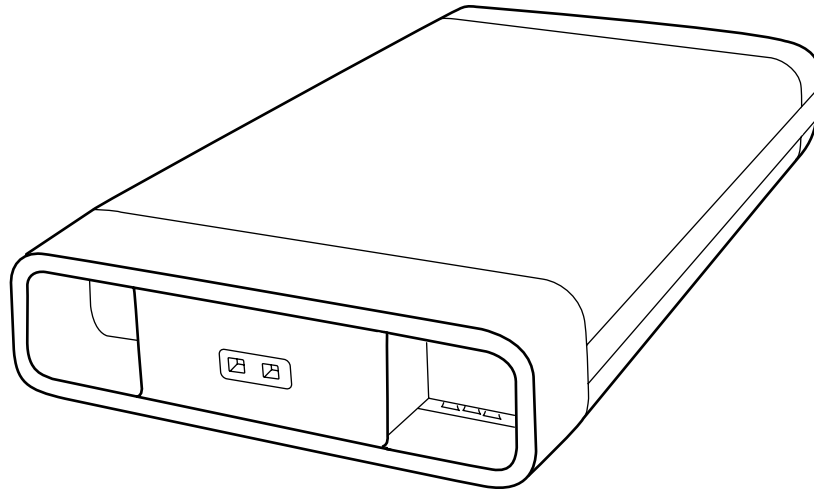


NOTE: Before starting the System Recovery Program, remove the HP Personal Media Drive. See your System Recovery documentation.

Connecting the Drive

As an external drive, the HP Personal Media Drive connects and disconnects easily from a USB 2.0 connector on the front or the back of most PCs. The drive comes with software, an external USB cable, and an external power cord and power adapter. For information about connecting and using the HP Personal Media Drive as an external drive, refer to the documentation that came with the HP Personal Media Drive.

 For some PCs (select models only), the HP Personal Media Drive is designed to fit inside a horizontal or vertical drive bay.

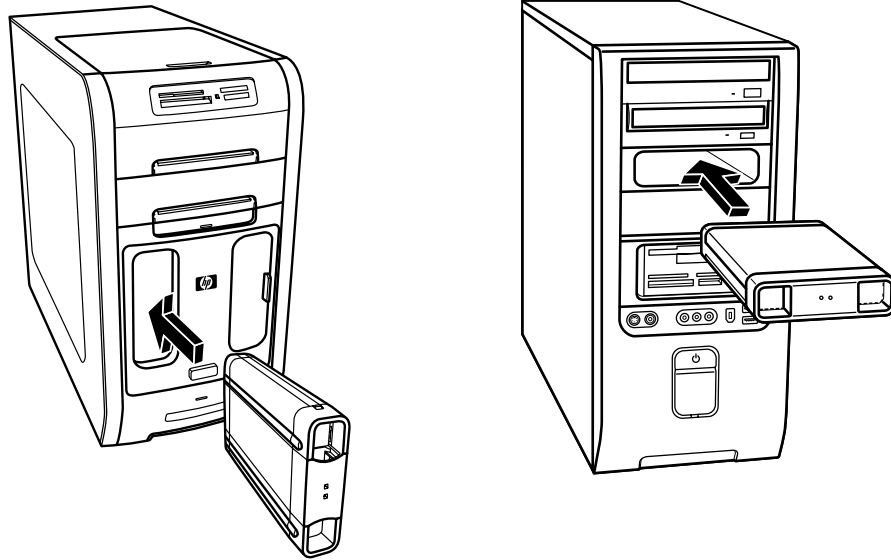

NOTE: The drive can be easily inserted and removed from the bay without turning off the PC. This feature is sometimes referred to as *warm swappable*.

This special drive bay includes an internal USB port and power cable that connect to the drive when it is inserted.

The drive turns on when it is plugged into an active USB port. If the PC is turned on with the drive connected, the drive automatically turns on. When the USB cable for the drive is not plugged in or when the USB power from the PC is turned off, the drive automatically turns off. When the PC is in standby mode (a reduced power state), the drive remains turned on.



 
WARNING: Do not move the PC with the HP Personal Media Drive inserted in the bay or connected to a USB port on the PC. This can cause damage to the drive and cause data loss.

Inserting the Drive

- 1 Turn on the PC.
- 2 Line up the ridges on the bottom of the drive with the two slots on the side or the bottom of the PC drive bay. Do not force the drive into the bay; it should slide easily into the bay.

- A** Drive activity indicator light
- B** Power on indicator light
- C** HP Personal Media Drive guide ridges

- 3** Slide the drive all the way into the drive bay until the drive is firmly connected to the internal power and USB port. With the PC turned on, the power indicator (**B**) on the front of the drive is lit when the drive is inserted correctly.

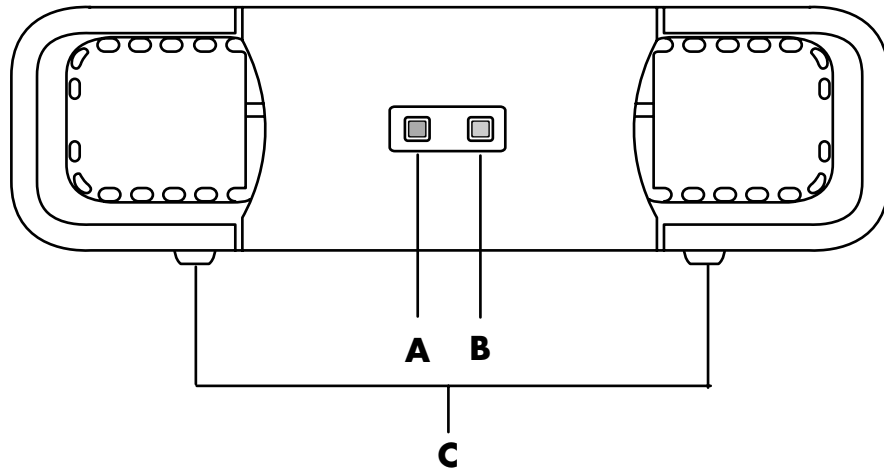

Locating the Drive and Assigning a Drive Letter

After you insert the drive into the PC, you can find the drive in My Computer. The operating system automatically assigns a letter to the drive. The assigned letter depends on the other storage devices connected to the PC.

To locate the drive:

- 1** Click **Start** on the taskbar.
- 2** Click **My Computer**.
- 3** Select the drive under Hard Disk Drives. The default name is HP Personal Media Drive.

You can permanently assign a drive letter to avoid the letter changing when you connect and disconnect this drive and other devices. Also, it is easier for a software program to locate the files on the HP Personal Media Drive if a drive letter is assigned. Some programs may not be able to find files if the drive has a new drive letter.

It is best to always remove your drive safely to avoid errors. See "Disconnecting the Drive" on page 43.

NOTE: To avoid multiple hard disk drives using the same drive letter, when connecting and removing the drives, assign the letter Z to the HP Personal Media Drive.

To assign a drive letter:

- 1 Click **Start** on the taskbar.
- 2 Right-click **My Computer**.
- 3 Select **Manage** and then click **Disk Management**.
- 4 Right-click the **HP Personal Media Drive**.
- 5 Select **Change Drive Letter and Paths**.
- 6 Click **Change** and select a letter, and then apply the changes by clicking **OK**.

The default volume label of this drive is HP Personal Media Drive. You can rename the drive in the My Computer window by right-clicking the drive, selecting **Rename**, and then typing a new name. Rename the drive if you have more than one HP Personal Media Drive.

Using the Drive

To store files:

The best way to transfer files to the HP Personal Media Drive is to drag them from your local hard disk drive. This allows you to place files in specific folders. Refer to the following procedures for more detailed instructions about creating linked folders.

To play media files:

You can play media from an HP Personal Media Drive.

- 1 Click **Start** on the taskbar.
- 2 Click **My Computer**.
- 3 Double-click the **HP Personal Media Drive** icon to locate your media file.
- 4 Double-click the file. Most media files open in Windows Media Player.

To play music files:

You can play music files that are stored on the HP Personal Media Drive:

- 1 Click **Start** on the taskbar, click **My Computer**, and then double-click the **HP Personal Media Drive** icon.
- 2 Create a personal music folder by right-clicking the drive window and choosing **New** and then **Folder**. Type a name for your personal music folder.
- 3 Drag or copy your music files into this created folder.
- 4 Open Windows Media Player by clicking **Start**, **All Programs**, and then clicking **Windows Media Player**.
- 5 In the Windows Media Player window, click **Tools**, select **Options**, and then select the **Media Library** tab.
- 6 Click the **Monitor Folders** button.
- 7 Click **Add** to add a pathway to your HP Personal Media Drive.
- 8 Browse to locate your created music file folder on your HP Personal Media Drive, and then click **OK**.


- 9 Click **OK**, and then **OK** again to close the Options window. Now your music files on your HP Personal Media Drive appear in the Windows Media Player library when your drive is connected to the PC.

When you disconnect the drive, your music files may still appear in the Windows Media Player Library. To refresh your PC, open and close Windows Media Player. If that doesn't work, restart the PC.

Disconnecting the Drive

You can safely remove the drive when it is not active. When the amber activity light is blinking, the drive is active saving or transferring data. Removing the drive while the light is blinking may cause data loss or damaged files.

To disconnect the HP Personal Media Drive safely:

- 1 Close all programs that may be accessing your HP Personal Media Drive. Make sure that the activity light on the drive is off.
- 2 Double-click the **Safely Remove Hardware** icon in the system tray (on the Start taskbar). If this icon is hidden, click the arrows on the taskbar to display it. The Safely Remove Hardware window opens. 
- 3 Double-click **USB Mass Storage Device** to locate your HP Personal Media Drive. USB Mass Storage Device may be listed twice. One may contain a memory card reader or other mass storage drive.
- 4 Select the **HP Personal Media Drive**, and then click **OK**. The name of the drive may be different if you renamed it, or it may appear as Generic Volume followed by the assigned drive letter.
A Safe to Remove Hardware message appears in the system tray, letting you know that the device is safe to disconnect.
- 5 Click **Close**.
- 6 Disconnect the drive by removing it from the drive bay.



Working with Digital Images

Working with Digital Images

You can connect a digital image source, such as a digital camera or a digital video camera, directly to the PC or through a docking station. Digital picture files you copy or download from the device appear in the My Pictures folder. You can copy digital picture files from the memory cards used by digital cameras and other digital imaging devices by using the memory card reader (select models only). Refer to "Using the Memory Card Reader" on page 29.

Using HP Image Zone Plus

Use the HP Image Zone Plus software program to manage your photos, scanned images, and video clips. It has all the tools you need for viewing, organizing, editing, printing, sharing, and protecting digital images.

To open HP Image Zone Plus:

- Click the **HP Image Zone Plus** icon on your desktop.

Or

- Click **Start** on the taskbar, choose **All Programs**, and then click **HP Image Zone Plus**.



 
A Go to My Pictures button and mode tabs. Click the button labeled **Go to My Pictures** (or **HP view**) to toggle between the Microsoft My Pictures directory and the HP Image Zone Plus software.

B Control area including view options, Print, Preferences, and Help buttons.

C Work area, or *Gallery*, showing images on the PC.

D Selection tray.

The HP Image Zone Plus window opens.

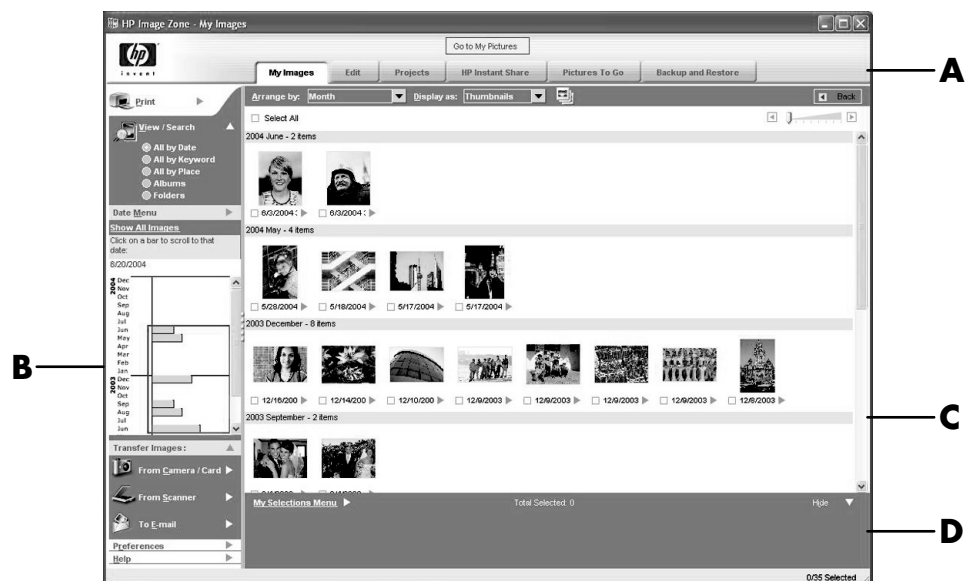

Click a mode tab at the top of the application window (**A**) to choose the desired work area, as described in the following list.

NOTE: Click the button labeled **Preferences** (**B**) to customize the HP Image Zone Plus and change some tab settings. For example, you can set HP Image Zone Plus to start any time you click the My Pictures folder.

My Images Click this tab to find, view, manage, and print single or multiple photos or video clips. At the top of the control area (**B**), click **All by date** to view all your images, or choose **Folders** to browse for images. To select the images that you want to print or use, simply click the image (or images) in the gallery (**C**), and it appears in the selection tray (**D**). The selection tray images appear under every tab. For more information, see “manage your images” in Help.

Edit Click this tab to make changes, such as crop and red eye removal, to the images and video clips you placed in the selection tray. For more information, see “edit your images” in Help.

Projects Click this tab to create or to print a project using the images in the selection tray. Projects include photo album pages, cards, and flyers. For more information, see “create projects” in Help.

HP Instant Share Click this tab to share photos with family and friends. Using HP Instant Share, you can create an e-mail, select the pictures to include, and then send your message. HP Instant Share creates thumbnails of your images that the recipients can view immediately in the message instead of opening a large e-mail attachment. To view the original photo, they can click on a thumbnail in their message, which links them to a secure Web page. On the Web page, they can see the photos, order prints (if the service is available in your country/region), save the images to their PC, and other tasks. For more information, see “share your images” in Help.

NOTE: You must be connected to the Internet to use the HP Instant Share feature.

Backup and Restore Click this tab to create backup discs of all the images on your PC or to restore images (either from a backup disc or from an automatically created digital negative).

Pictures to Go Click this tab to send photos to a mapped drive (such as a flash memory card or USB flash drive), or to synchronize photos on an HP iPaq, a hand-held pocket PC. You can use the date, keyword, and album organization information to choose which photos to send, or choose the photos manually. Deleting the *keep current* option for synchronizing with an iPaq automatically updates the photos on the device every time it synchronizes.

For more information on using HP Image Zone Plus, click the **Help** link in the control area (**B**) of the program window.

Burning a label on a LightScribe media disc

You can burn the label before or after you burn the disc with data, music, or picture files. Labels can be a simple title and contents list or you can get more creative by adding backgrounds and images.

Creating disc labels with HP Image Zone Plus

Creating a label with LightScribe is a separate process from recording data, music, or picture files onto a disc. Depending on the LightScribe software you use, you can create a label before or after you burn files onto the disc.

NOTE: To burn the label, you must flip the disc over and place it label side down in the disc tray.

You can quickly create a label for a disc that contains your images you have organized and edited in the HP Image Zone Plus program.

NOTE: Any images you have not organized and edited in HP Image Zone Plus will not be backed up.

To burn a disc label in HP Image Zone Plus:

- 1** Click **Start, All Programs, HP, HP ImageZone Plus**, and then click **HP ImageZone Plus** again.
- 2** Select the **Backup and Restore** tab, and then click **Backup** on the left side of the window.
- 3** Click **Print LightScribe label**.
- 4** Insert disc, and click **OK**. The Sonic Express Labeler program opens.
- 5** Click **Text** and then enter your text for Title and Subtitle.
- 6** For each line of content description, click **New** and enter text for the information you want to include, and then click **OK**.
- 7** Click **OK** again when finished adding all the contents information.
- 8** Select a label template by clicking **Layout** and choosing a layout.
- 9** Select a background, if desired, by clicking **Background**. Select one of the provided backgrounds or click **More** to find one of your own images to use as a background.

NOTE: LightScribe creates a grayscale image similar to a black and white photograph.

- 10** When you are satisfied with the appearance of your label design, insert the LightScribe disc (label side down) into the disc drive tray and then click **Print**.

NOTE: If a message is displayed that the disc is not recognized, you may not have the correct media or you may need to flip the disc over to record your label. To record the label, the disc must be placed label side down in the disc tray.

- 11** From the Disc Label menu, select **LightScribe 12cm Disc**.
- 12** Select a Contrast Level and then click **OK** to begin burning the label. The disc is ejected when the label is complete.

The estimated time to complete the label displays, along with a progress bar to show you the time remaining. Printing a label can take up to 40 minutes, depending on how much data is on the label. You can continue to work on your PC while LightScribe is burning the label.

NOTE: A sudden bump or vibration of the PC during the labeling process may affect the quality of the label.

Creating a backup disc of your pictures with a LightScribe label

NOTE: This procedure does not allow you to edit your label. The label automatically contains a disc title, the name of the person logged in, and the date and time the label is recorded. This type of label takes about 3–7 minutes to print.

Create an incremental backup disc of images you have put into ImageZone.

- 1** Click **Start, All Programs, HP, HP ImageZone Plus**, and then click **HP ImageZone Plus** again.
- 2** Select the **Backup and Restore** tab, and then click **Backup** on the left side of the window.
- 3** Click **Start backup**.
- 4** Select **Full backup** or **Incremental backup**, and then click **Next**.
- 5** Select your media type, make sure the Use LightScribe Media check box is selected, and then click **Next**.
- 6** Select the LightScribe drive from the drop-down list, and then click **Next**.
- 7** Insert a blank disc, and then click **Write disc**. If you want to create a LightScribe label for your backup disc, insert a LightScribe disc with the label side up.
- 8** After the backup is complete, turn your disc over with the label side facing down, and then click **Write Label**.
- 9** When the label is complete, click **Next**, and then click **Finish**.



Playing CDs and DVDs

Your PC includes software that lets you play music CDs and DVD movies (select models only). This section describes how to:

- Play music CDs using Windows Media Player, or play music CDs or DVDs with iTunes.
- Play DVD movies using Windows Media Player or InterVideo WinDVD (select models only).
- Play video CDs (VCD) with InterVideo WinDVD or Windows Media Player.

Playing Music CDs with iTunes

You must have either a CD or DVD drive.

- 1** Insert the music CD into your CD or DVD drive.
 - The iTunes window opens. If the Audio CD wizard window opens, choose **Play Audio CD using iTunes** from the list. You may have to scroll down in the window to see iTunes.

Or

- If the iTunes window does not automatically open, click **Start** on the taskbar, choose **All Programs**, click **iTunes**, and then click **iTunes**.

- 2** The music CD automatically begins to play.

Or

Click the CD in the source list, and then click the **Play** button in the upper-left corner of the iTunes window. To play a particular song, double-click the song name (or track number).

NOTE: If you do not have an Internet connection, your CD is listed as Audio CD on the source list and your song names are listed as track numbers.

For more information on using iTunes, click the **Help** menu in the iTunes menu bar. For help on line, go to:

<http://www.hp.com/music/>

Playing CDs and DVDs with Windows Media Player

Your PC must have a DVD drive to play DVD movies.

- 1 Insert the music CD or DVD movie into the drive.
 - The Windows Media Player window opens. If the wizard window opens, select **Windows Media Player** from the list. You may have to scroll down in the window to see Windows Media Player.
- Or
 - If the Windows Media Player window does not automatically open, click **Start** on the taskbar, choose **All Programs**, and then click **Windows Media Player**.
- 2 To play the CD or DVD, use the playback buttons in the Windows Media Player window. To play a particular track, double-click the title (or track number) in the Playlist. You can also control playback by using the media control buttons on the keyboard (select models).

For more information on using Windows Media Player, click the **Help** menu in the Windows Media Player menu bar. If necessary, first display the menu bar by clicking the **up arrow** icon in the upper-left corner of the Windows Media Player window.

Playing DVD Movies with InterVideo WinDVD

The InterVideo WinDVD program uses a DVD drive (select models only) to play DVD movies.

NOTE: Most DVD movies are localized to geographical countries/regions. See "Using country/region codes" on page 54.

- 1 Insert a DVD disc into the DVD drive.

NOTE: On a double-sided DVD, read the text around the inner hole of the disc to determine which side (A versus B or Standard versus Widescreen) to play. Place the disc in the tray with the label facing up for the side you want to play.

- 2** Close the disc tray by gently pushing the tray into the PC.

The movie plays in its own resizable video window, and the WinDVD control panel appears. If the Play DVD movie wizard window opens, select **Play DVD movie using InterVideo WinDVD** from the list. You may have to scroll down in the window to see it.

Or

If the program does not automatically open:

- a** Click **Start**, choose **All Programs**, choose **InterVideo WinDVD**, select **InterVideo WinDVD Player**, and then click **InterVideo WinDVD**.
- b** Use the playback buttons on the control panel to view the movie.

NOTE: To see what a button does on the control panel, place the mouse pointer on the button; the button title appears onscreen.

NOTE: If you are playing a movie full screen and the WinDVD control panel is hidden, you can redisplay it by clicking anywhere in the video window.



To use the WinDVD control panel:

- To move the WinDVD control panel, place the mouse pointer on the panel (but not on a button), and drag it to the desired location on the screen.
- To resize the video window when it is not full screen, place the mouse pointer on a window corner and drag the border.

Or

Click the **Full Screen** button in the upper-right corner of the WinDVD control panel.

- For information on the InterVideo WinDVD software, refer to the online Help within the program by clicking the **?** (question mark) icon in the WinDVD control panel.



Using country/region codes

Most DVD discs have country/region codes embedded in the disc data that limit where the DVD movie can be played.

The country/region number is usually placed over a world globe printed on the DVD packaging and disc. DVDs without country/region codes play on any player or drive in any country/region.




WARNING: You can change countries/regions only five times before the country/region code locks and becomes permanent. Once the code locks, you can play DVDs from that country/region only. If the country/region code locks, and you need help, contact Support.

WinDVD is not preset to a particular country/region — the country/region code of the first DVD movie you play determines your DVD country/region.

For example, if you play a DVD with a country/region 1 code, WinDVD sets the current country/region of your DVD player to 1. If you later play a DVD that is coded for a different country/region, WinDVD asks if you want to set this as the current country/region.

Playing Video CDs (VCD) with InterVideo WinDVD

- 1 Insert your video CD (VCD) into a DVD or CD drive.
- 2 Select **Play DVD movie using InterVideo WinDVD**, and click **OK**.
Or
If the program doesn't open, click **Start**, choose **All Programs**, choose **InterVideo WinDVD**, select **InterVideo WinDVD Player**, and then click **InterVideo WinDVD**.
- 3 If you have a dual-language VCD, the sound of one language comes out of the left speaker and the other language comes out of the right speaker. Double-click the **Volume** icon on the taskbar. 
- 4 Under **Volume Control Balance**, move the slider bar all the way to the right or to the left, depending on which language you want to hear.
- 5 Close the Volume Control window.

Playing Video CDs (VCD) with Windows Media Player 9

- 1** Insert your video CD (VCD) into a DVD or CD drive.
- 2** Select **Play DVD movie using Windows Media Player**, and click **OK**.
Or
If the program doesn't open, click **Start**, choose **All Programs**, and **Windows Media Player**.
- 3** Click **File** on the menu bar at the top, and click **Open**. (If you do not see the menu bar, click the small circle with the up/down arrows in the upper-left corner of the window.)
- 4** Click the **Look In** drop-down arrow and select the drive that has the Video CD.
- 5** Double-click the **MPEGAV** folder.
- 6** Select **Any File (*.*)** from the **Files of type** drop-down list.
- 7** Select the file, and click **Open**.
- 8** If you have a dual-language VCD, the sound of one language comes out of the left speaker and the other language comes out of the right speaker. Click **View** on the menu bar, choose **Enhancements**, and select **Graphic Equalizer**.
- 9** Move the **Balance** slider bar all the way to the left or to the right, depending on which language you want to hear.
- 10** Close the Graphic Equalizer window.



Creating Audio and Data Discs

This chapter contains the procedures you must perform to record (or *burn*) music and data files to recordable CD and DVD discs. It also includes information about labeling your discs using the LightScribe labeling technology included on select models.

For information about recording video files to DVDs, see “Creating Video Discs and Movies” on page 73.

Your PC includes one or more CD, DVD, or combination optical drives capable of recording. Additionally, your PC may include the following software programs for recording to CDs or DVDs:

- iTunes
- Windows Media Player
- Sonic MyDVD Plus (select models only)
- Sonic DigitalMedia Plus
- Windows XP

These programs include features that enable you to copy, archive, and manage music and data files and then record the files to CDs or DVDs. You can also use iTunes or Windows Media Player to download and copy music files to a portable device or memory card.

IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

NOTE: *Burn* is an industry term used to describe the recording of information onto a DVD or CD. Optical recording uses a laser beam to place information onto the disc, thus the term *burning*.

Erasing Rewritable Discs Before Recording

Previously recorded files on CD-RW, DVD-RW, or DVD+RW discs must be erased before recording new files. CD-R, DVD-R, and DVD+R discs cannot be erased.

To erase a rewritable disc in Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Tools** and then **Erase Disc**.



- 3 Insert the rewritable disc you want to erase.
- 4 Click the **Quick Erase** or **Full Erase** option, and then **Erase Disc**.

Working with Audio CDs

Sonic DigitalMedia Plus enables you to create audio CDs that play in your car or home CD player, and on PCs. You can create two main types of music CDs:

- **Uncompressed** — Typical CD format like you would purchase on a commercial CD. This type of CD will hold 10 to 20 songs depending on their length.
Uncompressed files can be burned on CD-Rs (which play in most home and car stereos, DVD players, and computers) or CD-RWs (which play only in some stereos, DVD players, and computers).
The procedure for creating this type of CD is described in “Creating audio CDs” on page 60.
- **Compressed** — Files are burned to a disc using a compressed file format (MP3, WMA, or M4A). The smaller file format enables you to fit approximately ten times as many songs onto the disc (depending on length and format).
Compressed files can be burned to CD-Rs, CD-RWs, DVDs, DVD-RWs, or DVD+RWs (select models only). Compressed files can only be played on computers, CD players, or DVD players that support the *file format* you use to create the disc (MP3 is most commonly supported). For file format compatibility, check the documentation for the device where you intend to play the disc. You may hear a slight loss of sound quality using compressed audio files.
The procedure for creating this type of CD is described in “Creating jukebox discs” on page 60.

For more compatibility information, see “Disc Features and Compatibility Table” on page 69.

Both Sonic programs create *closed-session* music CDs, which means you must record all music files on one CD in one recording session. Music files can be recorded repeatedly on a rewritable CD-RW disc, but all previously recorded files must be erased first. CD-R discs cannot be erased.

IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

Verifying audio disc recorded without errors

When copying or burning audio files to CD, it is recommended that you use Sonic DigitalMedia Plus because it includes a feature that confirms that your disc has been created without errors.

This data verification feature is enabled by default.

To check the status of the write verification feature in DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Tools**, and then **Options**.



- 3 In the Options window, click **Copy**.
- 4 Ensure the *Verify copied data discs* option is checked.
- 5 Click **OK**.

Audio CD tips

When recording music files, it is important to note that:

- To play your music CD in a home or car stereo, it needs to be recorded as a music CD in CD audio (CDA) format, not as a data CD.
- As you add music files in the recording session, DigitalMedia Plus calculates and displays the amount of recording time available to record additional music files.
- You can't record song titles unless you make an exact copy of a music CD in your collection.

- If your recording fails, manually select a slower recording speed, if available, each time you make a recording. Refer to the Help menu in your selected software program for more information about selecting a slower recording speed.
- If you try to record more than a standard CD can hold, a message displays warning you that all the tracks may not fit on your disc.

IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

Creating audio CDs

To create uncompressed audio CDs using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Audio** tab and then **Audio CD**.
- 3 Do one or more of the following:
 - Click **Add Music** and navigate to music stored on your PC.
 - In the Quick Find panel, click **Scan** to automatically search your PC for songs.
 - Insert a CD and add songs from it.
- 4 Select the songs you want to record, and then click **Add**.
- 5 Click the **Burn** icon when you have added all the audio files to your music CD project.
- 6 When prompted, insert a blank CD-R or CD-RW disc. If you want to play your music CD in your home or car stereo, use a CD-R disc. CD-RW discs may not play in some stereos.
- 7 Click **OK**.



You can get detailed online help by clicking the **Help** menu and then selecting **Help**.

Creating jukebox discs

To create compressed (jukebox) music CDs or DVDs using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Audio** tab, and then **Jukebox CD/DVD**.
- 3 Do one or more of the following:
 - Click **Add Music** and navigate to music stored on your PC.
 - In the Quick Find panel, click **Scan** to automatically search your PC for songs.
 - Insert a CD and add songs from it.

- 4 Select the songs you want to record, and then click **Add**.
- 5 Click the **Burn** icon when you have added all the audio files to your music CD project.
- 6 When prompted, insert a blank disc.



DVD discs can store significantly more music files than a CD. Jukebox discs can only be played on computers, CD players, or DVD players that support the *file format* you use to create the disc (MP3 is most commonly supported).

For file format compatibility, check the documentation for the device where you intend to play the disc.

- 7 Click **OK**.

You can get detailed online help by clicking the **Help** menu, and then selecting **Help**.

NOTE: DigitalMedia Plus scans for all audio files, even the sounds from your operating system. If you don't want to display some of these sounds, you can select the **Options** icon (wrench), and then select **Audio**. Select **Hide Audio Files Shorter Than** (in seconds), and then type the number of seconds, and click **OK**.

Working with Data DVDs and CDs

Unlike audio CDs and jukebox DVDs, data DVDs and CDs can be recorded in multiple sessions.

Verifying data disc recorded without errors

When copying or burning data files to DVD or CD, it is recommended that you use Sonic DigitalMedia Plus because it includes a feature that confirms that your disc has been created without errors.

This data verification feature is enabled by default.

To check the status of the write verification feature in DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Tools** and then **Options**.



- 3 In the Options window, click **Data**.
- 4 Ensure the *Verify data written to the disc after burning* box is checked.
- 5 Click **OK**.

Data disc tips

When storing data files on a disc, it is important to note that:

- You can add new data files to a CD-R, DVD+R or DVD-R in a later recording session, until the disc is full. With DVD+R or DVD-R discs, insert your partially recorded DVD, click the **Wrench** icon to display the Options window, click **Data**, select the first **Write-Once DVD Compatibility** option, and then click **OK**.
- When you record files that have the same name as previously recorded files, Sonic DigitalMedia Plus updates the file and the previous version is overwritten.
- Sonic DigitalMedia Plus allows you to change the names of files you want to record and the files that were previously recorded.
- As you select data files to record to your disc, Sonic DigitalMedia Plus calculates and displays the amount of recording space used on your disc.
- If your recording fails, manually select a slower recording speed, if available, each time you make a recording. Refer to the Help menu in your selected software program for more information about selecting a slower recording speed.



Creating data discs

To create data CDs or DVDs using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Data** tab, and then click **Data Disc**.
- 3 Do one or more of the following:
 - Click **Add Data** and navigate to files stored on your PC.
 - In the Quick Scan panel, select a type of file to search for, and then click **Scan** to automatically search your PC for the selected file type.
 - Insert a CD or DVD that contains the file you want to add.
- 4 Select the files you want to record, and then click **Add**.
- 5 To name your disc, click **Volume Label**, and then type a name over it. Sonic DigitalMedia Plus assigns a name based on the recording date if you do not type a name.
- 6 Click the **Burn** icon when you have added all the files to your data project.
- 7 When prompted, insert a blank or appendable disc.
DVD discs can store significantly more files than a CD.
- 8 Click **OK**.



You can get detailed online help by clicking the **Help** menu and then selecting **Help**.

NOTE: An appendable disc can have additional files added to it, if there is disc space available. Recorded audio CDs are closed-session discs that are not appendable.

NOTE: You can rename your files in the file selection window by selecting and typing over the current name. This does not affect the original files on your hard disk drive.

NOTE: DVD discs can store significantly more files than a CD.

Copying a DVD or CD

Sonic DigitalMedia Plus enables you to make copies of an existing music or data disc. You can configure Sonic DigitalMedia Plus to verify that:

- Data files have been copied without errors by performing the procedure described in “Verifying data disc recorded without errors” on page 61.
- Music files have been copied without errors by performing the procedure described in “Verifying audio disc recorded without errors” on page 59.

IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

To make a copy of an existing music or data disc using Sonic DigitalMedia Plus:

- 1** Open the DigitalMedia Plus program by clicking **Start**, **All Programs**, **Sonic**, and then **DigitalMedia Home**.
- 2** Click the **Copy** tab, and then **Disc Copy**.
- 3** Insert the CD or DVD you want to copy.
- 4** Insert a blank DVD or CD into the drive.
- 5** Click the **Copy** icon.
- 6** Click **Done** when the recording is complete.

Archiving Files on a CD or DVD

To make an archive file copy of files stored on your PC using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start**, **All Programs**, **Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Data** tab and then **Easy Archive**.
- 3 Select the path to the files that you want to archive (or click **Browse** to navigate to them).
- 4 Select the type of files you want to add to the archive, or select **All Files in the Selected Path**.
- 5 Place a check mark in the *Only Archive Files Changed Since* box, and select a date to limit the scan to files that have been changed since that date.
- 6 Click **Save**, enter a name for your archive, and then click **OK**.
- 7 Click the **Burn** icon.
- 8 When prompted, insert a recordable disc and then click **OK**.
If the files do not fit on one disc, you are prompted for additional discs.
- 9 Click **Done** when recording is complete.



For additional information about saving archives on your hard disc drive, or scheduling automatic archives, see the online help.

Working with Image Files

The Sonic recording programs can convert all the files from a CD or DVD and convert them into a single .iso file, or a series of .gi files (none exceeding 2 GB) known as an *image file*. You can use the image file to reproduce the original disc. Image files are typically used when you need to make multiple copies of the same disc.

NOTE: Your DVD Writer or CD Writer drive will not copy commercially available DVD movies. Most commercial DVDs are encoded to prevent unauthorized duplication.

Creating an image file

To make an image file using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Copy**, select **.iso** or **.gi**, and then click **Save Image**.
- 3 Insert the CD or DVD from which you want to make an image file.
- 4 Click **Browse** to select the location where the image file will be created.
- 5 Click the **Save Image** icon to create the image file.

Burning from an image file

To burn a CD or DVD from an image file using Sonic DigitalMedia Plus:

- 1 Open the DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Copy** and then **Burn Image**.
- 3 Click **Browse** to select the image file.
- 4 Insert a recordable CD or DVD into the drive.
- 5 Click the **Burn Image** icon.
- 6 Click **Done** when recording is complete.



Disc Labeling with LightScribe

LightScribe (select models only) is a direct disc labeling technology providing you a simple way to burn precise, silk screen-quality labels. It combines the CD or DVD drive of your PC with specially coated discs (sold separately) and enhanced disc-labeling software.

A LightScribe-enabled CD or DVD disc drive uses the optical laser in the drive to burn a label onto a thin dye coating on the label side of the disc. There is no ink to smear or paper to curl, and there are no adhesives to loosen.

LightScribe media is identified by the LightScribe logo on the retail packaging and on the inner hub area of the disc itself. Your PC may come ready to work with many versions of LightScribe media (select models only); however, as new media versions are introduced you will need to update the driver software for your LightScribe-enabled CD or DVD drive. Get driver updates from the HP Support Web site:

<http://www.hp.com/support>

NOTE: LightScribe creates a grayscale image similar to a black and white photograph.

LightScribe requirements

Burning a label with LightScribe requires three things:

- LightScribe-enabled DVD drive (select models only).
- Labeling software that supports LightScribe.
- LightScribe discs (sold separately).

Burning a LightScribe label with Sonic Express Labeler

- 1 Click **Start**, **All Programs**, **Sonic**, and then click **Express Labeler**.

NOTE: You can open Express Labeler from within DigitalMedia Plus by clicking **Tools**, and then **Label Disc**.

- 2 In the Step 1: Select Project area, make sure that *Disc Label* is selected.
- 3 In the Step 2: Edit area:
 - a Click **Text** to display the Edit Text window. Enter text for the title and subtitle.
 - b Click **New** to display the Track window. Enter text to identify the first track or file (you can optionally enter artist and date, or length), and then click **OK**.
 - c Repeat the previous step for each track or file on the disc.
 - d Click the left or right arrows next to **Layout**, **Background**, and **Font** to select design elements for the disc. The selections you make are previewed in the disc window.
- 4 When you are satisfied with the appearance of your label, insert the LightScribe media disc (label side down) into the disc drive tray, and then click **Print**.

NOTE: LightScribe creates a grayscale (monochrome) image similar to a black-and-white photograph.

- 5 From the Disc Label menu, select **LightScribe 12cm disc**.
- 6 Click **OK** to begin burning the label.

The estimated time to complete the label displays, along with a progress bar to show you the time remaining. You can continue to work on your PC while LightScribe is burning the label.

Burning a LightScribe label after burning with iTunes

iTunes works with Sonic Express Labeler to allow you to burn labels on a LightScribe audio CD. The playlist you create in iTunes to burn a disc is automatically imported into Express Labeler so that this information is available for you to use on your LightScribe label. To use Express Labeler from iTunes, the music tracks in the playlist you are using must fit on a single CD.

- 1** Click **Start, All Programs, iTunes**, and then click **iTunes** again.
- 2** Burn an audio CD with iTunes. When the burning process is complete, click **Yes** on the Create LightScribe Label window.
- 3** In the Step 1: Select Project area, make sure that **Disc Label** is selected.
- 4** In the Step 2: Edit area:
 - a** Click **Text** to display the Edit Text window. Enter text for the title and subtitle.
 - b** Click **New** to display the Track window. Enter text to identify the first track or file (you can optionally enter artist and date, or length), and then click **OK**.
 - c** Repeat the previous step for each track or file on the disc.
 - d** Click the left or right arrows next to **Layout**, **Background**, and **Font** to select design elements for the disc. The selections you make are previewed in the disc window.
- 5** When you are satisfied with the appearance of your label, insert the LightScribe media disc (label side down) into the disc drive tray, and then click **Print**.

NOTE: LightScribe creates a grayscale image similar to a black-and-white photograph.

- 6** From the Disc Label menu, select **LightScribe 12cm disc**.
- 7** Click **OK** to begin burning the label.

The estimated time to complete the label displays, along with a progress bar to show you the time remaining. You can continue to work on your PC while LightScribe is burning the label.

Using adhesive disc labels



WARNING: When labeling your CDs and DVDs, do not use sticky labels. They can cause the disc to play erratically. Instead, write on the disc with a felt-tip pen to label it.

Or, you can create a LightScribe label for your disc if you have a LightScribe optical drive and you use LightScribe media discs. Refer to “Disc Labeling with LightScribe” on page 65.

Compatibility Information

An important feature of a DVD Writer/CD Writer drive is its high level of compatibility with other optical drives and CD and DVD players:

- The CDs that you create play in most home and car stereos and in most computer DVD-ROM and CD-ROM drives.
- The DVDs that you create are compatible with some DVD video players and with most computer DVD-ROM drives.
- CD-R discs are more compatible with home and car stereos than CD-RW discs are.

Your DVD Writer/CD Writer drive is able to read from and record to almost every type of optical disc. Writing speed rates for the DVD Writer/CD Writer drive are fast, allowing quick recording times.

NOTE: CD-R discs are more compatible with home and car stereos than CD-RW discs.

Disc Features and Compatibility Table

Disc	File type	Can be recorded onto	Plays in PC	Plays in home or car stereo	Plays in home DVD player
CD-ROM	Data	No	Yes	No	No
	Music	No	Yes	Yes	Varies by model
CD-R	Data	Yes	Yes	No	No
	Music	Yes	Yes	Varies by model	Varies by model
CD-RW	Data	Yes	Yes	No	No
	Music	Yes	Yes	Varies by model	Varies by model
DVD-ROM	Data	No	Yes	No	No
	DVD movie	No	Yes	No	Yes
DVD+R and DVD-R	Data	Yes	Yes	No	No
	DVD movie	Yes	Yes	No	Varies by model
Double-Layer DVD+R/ DVD-R	Data	Yes	Varies by model	No	Varies by model
	DVD movie	Yes	Varies by model	No	Varies by model
DVD+RW and DVD-RW	Data	Yes	Yes	No	No
	DVD movie	Yes	Yes	No	Varies by model
VCD	DVD movie	No	Yes	No	Varies by model

NOTE: Some PCs come with the Double-Layer DVD Writer. It supports single-layer and double-Layer DVD media. Double-Layer technology gives you greater capacity and allows you to store up to 8 GB* of data on double-layer DVD+R or DVD-R media.

Double-Layer is a new technology. Double-Layer media compatibility will vary widely with some home DVD players and DVD-ROM drives.

*1 GB is defined as 1 billion bytes. 1 GB = 1 billion bytes when referring to hard disk drive capacity. Actual formatted capacity is less.

For the latest disc compatibility information for your PC, go to the HP Support Web site at: <http://www.hp.com/support>

NOTE: Double-Layer DVD technology is supported by select models only.

NOTE: The Sonic recording programs support the double-layer technology.

Optical Drive Quick Reference Table

Optical drive can:	CD-ROM	CD-RW	DVD-ROM	DVD+RW/+R DVD-RW/-R	Double-Layer DVD	Combo CD-RW/DVD
Read CDs, CD-Rs, and CD-RWs	Yes	Yes	Yes	Yes	Yes	Yes
Read DVDs	No	No	Yes	Yes	Yes	Yes
Read data on a CD	Yes	Yes	Yes	Yes	Yes	Yes
Play music	Yes	Yes	Yes	Yes	Yes	Yes
Record data or music to disc for storage or backup	No	Yes	No	Yes	Yes	Yes
View DVD movies	No	No	Yes	Yes	Yes	Yes
Record DVD movies	No	No	No	Yes	Yes	No
Play games	Yes	Yes	Yes	Yes	Yes	Yes

Software Quick Reference Table





Your PC includes a number of software programs that:




- Record and play CDs.
- Record data CDs.
- Import and edit video files.
- Record video CDs and DVDs.
- Organize digital media files.

The following table describes the functionality specific to each of these programs. Use it to determine which program to use to perform a task.

Note that some programs listed may not be included with your model, and that this is not a complete list of all included software.

To open any of these programs, click **Start** on the taskbar, choose **All Programs**, select the program folder (for example, **Sonic**), and then click the program name to open the software.

With this program:	You can:
InterVideo WinDVD Player 	<ul style="list-style-type: none">• Play DVD movies and video CDs (VCDs).
iTunes 	<ul style="list-style-type: none">• Play music CDs, MP3s, and other audio files.• Record music files.• Record a copy of an existing music or data CD to use on the PC.• Organize digital files into a library for recording or listening.
muvee autoProducer 	<ul style="list-style-type: none">• Select models only.• Add your own style to your movies with music, pictures, titles, scene transitions, and captions.• Edit your home movies.
RealPlayer 	<ul style="list-style-type: none">• Play music CDs, MP3s, and other audio files.• Play DVD movies. (RealPlayer can play DVDs only if another DVD player program, such as InterVideo WinDVD, is installed.)• Play video CDs.• Record music files.• Organize digital files into a library for recording or listening.

With this program:	You can:
<p>Sonic DigitalMedia Plus</p> 	<ul style="list-style-type: none"> • Record data and music files. • Record a copy of an existing music or data CD to use on the PC. • Create customized music CDs from CDs in your collection, or from .wav, .mp3, or .wma files. These CDs can be played in your home or car stereo. • Copy and share data files. • Create archive CDs or DVDs from files on your PC. • Capture (copy) video files. • Has setting for verification that the disc has been created without errors.
<p>Sonic MyDVD Plus (select models only)</p> 	<ul style="list-style-type: none"> • Record data and movie files. • Record a copy of an existing DVD to use on the PC. • Copy and share video files. • Capture (copy) video files.
<p>Windows Movie Maker 2.0</p> 	<ul style="list-style-type: none"> • Import audio, video, and other media files from a videotape, an audiotape, a Web camera, or a television broadcast. • Record audio and video files to create a video project that becomes a Windows Media source file with a .wmv extension. • Edit and preview files. • Send a movie in an e-mail or upload it to a Web server. • Add music files (.mp3). • Import audio files such as .mp3, .asf, or .wma; video files such as .wmv, .asf, .avi, or .mpg; or image files such as .jpg or .gif. • Create .avi and .wmv (Windows Media Video) files.

NOTE: You may have a software update CD included with your PC. You may need to install this CD before using the DVD Writer/CD Writer drive. To do this, follow the installation instructions that came with the CD.

Creating Video Discs and Movies

Your PC may include the following movie making programs, depending on your model:

- Sonic MyDVD
- Sonic DigitalMedia Plus (which includes MyDVD)
- Windows Movie Maker
- muvee autoProducer (select models only)

These programs all capture, edit, and manage your home video files, while allowing you to add your own personal touch to your home movies. They come installed on your PC and can be started by clicking **Start** and then **All Programs** on your desktop.

IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

Before You Begin Capturing Video

You can capture (copy) video files to your hard disk drive by using the Sonic MyDVD program. Among the devices supported by Sonic MyDVD are analog video devices, digital camcorders, and Web cameras. Use your composite or S-video inputs (input connectors vary by model) to capture video from a VCR or an analog video camera.

To capture video files, you need to:

- 1** Connect your video source device according to the device's instructions.
- 2** Turn your device on and set it to playback mode.
- 3** Make sure Sonic MyDVD can detect your digital or analog device.
- 4** If your PC has multiple video devices connected, they all appear on the Capture screen. You must select the video source you would like to use.

NOTE: You may need to turn your digital video device off and on again for the program to detect it.

For more information, click **Start**, **All Programs**, **Sonic**, and then **DigitalMedia Home**. When the program displays, click **Help** and then **Sonic MyDVD Help**.

Sonic MyDVD Video Projects

A Sonic MyDVD *video project* is a way to group, organize, store, play, and burn related video and still digital files. For example, if you went on a family vacation, you might have digital still and video images, and prints from a film camera. You can transfer all these images onto your PC and organize them into a project. (A scanner is required to transfer printed photos and is not included.)

Projects can remain on your PC for playback and as an archive, and they can be burned to a DVD or VCD disc.

Sonic MyDVD enables you to create video projects using the following interfaces:

- Standard program interface (described beginning in “Creating a Video Project” on page 74).
- Direct-to-Disc Wizards (described beginning in “Creating a Video Project with Direct-to-Disc Wizard” on page 79).

Note that the Direct-to-Disc Wizards do not include the editing features that are available from the standard interface. You can edit a project created with a wizard before burning it to a disc as described in:

- “Editing the style of a video project” on page 77.
- “Editing movie files” on page 77.

Creating a Video Project

To create a video project:

- 1** Click **Start**, choose **All Programs**, **Sonic**, and then **DigitalMedia Home**.
- 2** Click the **Video** tab to display the Video Guide.
- 3** Click **Create Project**, and then **DVD** or **VCD** depending on the type of project you want to create.

A project named Untitled DVD-Video or Untitled VCD-Video is created and displayed in the MyDVD project window.

- 4** Click **File** and then **Save** to change the name your project from Untitled to a more descriptive name. After renaming your project, click **Save**.

Continue your project by performing the procedure described in one or more of the following sections:

- “Adding files to a video project” on page 75.
- “Capturing video to a video project” on page 75.
- “Adding slide shows to a video project” on page 76.
- “Adding submenus to a video project” on page 76.

Adding files to a video project

You can add files to your DVD or VCD video project from:

- An existing DVD or VCD.
- Video files already stored on your PC.
- Video capture from a digital video camera (as described in the next section).


To add files from a DVD, VCD, or from your hard disk drive:

- 1 Click **File, Open**, and then select a video project that you created as described in “Creating a Video Project” on page 74.
- 2 Click **Add Files**.
- 3 Navigate to the folder that contains the video files you want to add or to the media drive that contains the DVD or VCD.
- 4 Select the files you want to add, and then click **Open**. The files are added to the current project and displayed in the project window.

Capturing video to a video project

You can capture live video or still images by connecting a Web camera or digital video camera to your PC’s front-panel USB connector (select models only). The video capture is added to your video project and stored in a file on your hard disk drive.

To add a video capture to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in “Creating a Video Project” on page 74.
- 2 Connect your digital camera to the USB port.
- 3 Click **Capture Video** to display the Capture screen.
Sonic MyDVD displays the name of the capture device (your camera), the default Capture Type (audio and video), and the default Quality Setting (High Quality).
- 4 Click **Record Settings** to edit any of these default settings.
- 5 Optionally, set a Capture Length, chapter points, or scene detection. Click the corresponding **Help** icon to display the online help for each of these features. 
- 6 Click one of the following:
 - **Grab Frame** — The image currently displayed in the Capture window is stored as a picture file (JPG, BMP, GIF, TIF, or PNG format).
 - **Start Capture** — Starts a video capture (.mpg format). Click **Stop Capture** to manually stop the capture if you did not set a capture length (step 5).
- 7 In the Save As dialog box, name the captured file and select the file format and the folder where you want to save it. Click **Save**.
- 8 Click **OK** to return to the project window.
The file is stored on your hard disk drive and added to the current project.

Adding slide shows to a video project

You can create a *slide show* (a series of still images displayed automatically) by adding existing still photos to your project or by capturing them with a connected digital video source.

To add a slide show to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in “Creating a Video Project” on page 74.
- 2 Do one or more of the following:
 - Add existing picture files as described in “Adding files to a video project” on page 75.
 - Capture still images as described in “Capturing video to a video project” on page 75.
- 3 Click **Options** to set the slide duration, or to add a background audio track. Online help is available for these features by clicking the **Help** icon.
- 4 Click **OK**.



Adding submenus to a video project

Each *project element* (video file, still picture file, and slide show) that you add to a video project is represented in the main project window.

Each menu displays six items before a new menu is automatically created and linked to the previous menu by a **Next** button.



You can manually add submenus to a project and use them to organize topics associated with the theme of your project. For example, if the project is your child’s soccer game, the video files of the game could be the main menu elements, and you could insert a submenu that contains interviews with your son and his teammates.

To add a submenu to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in “Creating a Video Project” on page 74.
- 2 Click **New Sub-Menu**. A submenu called Untitled Menu 1 is added to the first menu that has less than six project elements.
- 3 Click the submenu name (**Untitled Menu 1**), and type an appropriate name for the menu (for example, *Interviews* using the previous example).
- 4 Double-click the new submenu, and do one or more of the following:
 - Add existing picture files as described in “Adding files to a video project” on page 75.
 - Capture still images as described in “Capturing video to a video project” on page 75.

Editing the style of a video project

You can change the style of a number of elements within your video project. The elements include:

- Background color and graphics on the menus and submenus.
- Button styles.
- Background music.
- Text format (font, color, and size).
- Import custom styles.

To edit the look of a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in “Creating a Video Project” on page 74.
- 2 Click **Edit Style**.
- 3 In the Edit Style dialog box, change any of the previously mentioned elements, and then click **Apply To All Menus** or **Apply To This Menu**.



Editing movie files

After you capture or import video files, you can edit them using Sonic MyDVD to:

- Add additional files.
- Add background music.
- Search for specific scenes.
- Delete scenes.
- Add transition effects between scenes.
- Superimpose colors, themes, and effects over video scenes.
- Superimpose text effects over video scenes.

To edit your video files:

- 1 If your project is already open, click **Edit Movie** and skip to step 4.
- 2 Click **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 3 Click the **Video** tab, and then **File, New Project** or the **Open Existing Project**.
- 4 If you have already captured video for this project, they appear along the bottom as a *storyboard*. If you have video files on your hard disk drive you would like to add to this project, click **Add Files**.



- 5 Click one of the four tabs (**Fades and dissolves**, **Filters**, **Text**, or **Themes and backgrounds**) next to the preview screen.



- 6 Drag and drop any of the effects over scenes (or between them for transitions) in the storyboard.
- 7 Click **OK** to save the edits.

For more information about any of the editing features, click **Help** and then **Sonic MyDVD Help** from within the Edit window.

Burning a video project to disc

After you are satisfied with the contents and style of your video project, you can burn it to a DVD or VCD disc as follows:

- 1 Click **File**, **Open**, and then select a video project that you created as described in "Creating a Video Project" on page 74.
- 2 Save the file if you have made changes.
- 3 In the Quality fields, set the recording quality and the DVD or VCD type:
 - The quality settings range from **HQ** (the highest quality, but uses the most disc space), to **EP** (lowest quality, but you can fit more files).
As you select different quality settings, the disc space remaining indicator displays how much blank space there is on the disc for this mode.
 - The DVD formats include **2xDVD (8.5GB)** (Double-Layer), **DVD (4.7GB)** (the default setting), **DVD-RAM (2.6GB)**, and **DVD (1.4GB)**.
Some of these formats may not be supported by your model of PC.
- 4 Insert the selected type of disc into the appropriate drive tray, close it, and click **Burn**.



For detailed information about DVD and VCD recording quality and time, see:

- "Video Quality and Disc Size" on page 80.
- "DVD Recording Time" on page 81.


Creating a Video Project with Direct-to-Disc Wizard

Sonic MyDVD includes Direct-to-Disc Wizards that guide you through the steps you must complete to create a DVD or VCD *video project*. A video project is a way to group, organize, store, play, and burn related video and still digital files.

- 1** Connect your digital camcorder or Web camera to your PC.
- 2** Click **Start**, choose **All Programs, Sonic**, and then **DigitalMedia Home**.
- 3** Click the **Video** tab and then **Direct-to-Disc**.
- 4** Click **DVD** or **VCD** depending on the type of project you want to create. The Direct-to-VCD or Direct-to-DVD Wizard displays.
- 5** Click **Edit Style**, and edit any of the following elements:
 - Background color and graphics on the menus and submenus
 - Button styles
 - Background music
 - Text format (font, color, and size)
 - Custom styles

Alternately, you can click **No Menus** if you do not want to be able to select from multiple files in the project.

- 6** Type a name for your project in the project name field.
- 7** Click one of the following:
 - **Record to DVD** (or **Record to VCD** if you are creating a VCD project) — Select the device, number of copies, and write speed.
 - **Record to hard disk** — The video capture is stored by default in the My DVDs folder. Click **Location** if you want to select a different folder.
- 8** Click **Next**. The Capture screen displays.

Make sure the output from your digital camcorder appears in the Preview window. If it does not, double-check your connections and make sure your camera is in playback mode.
- 9** Click **Record Settings** to edit any of the default settings.
- 10** Optionally, set a capture length, chapter points, or scene detection. Click the corresponding **Help** icon to display the online help for each of these features. 
- 11** Click one of the following:
 - **Grab Frame** — The image currently displayed in the Capture window is stored as a picture file (JPG, BMP, GIF, TIF, or PNG format).
 - **Start Capture** — Starts a video capture (.mpg format). Click **Stop Capturing** to manually stop the capture if you did not set a capture length (step 10).
- 12** A confirmation message displays stating the disc or file was created successfully. Click **OK**.

Note that the Direct-to-Disc Wizards do not include the editing features that are available from the standard interface. You can edit a project created with a wizard before burning it to a disc as described in:

- “Editing the style of a video project” on page 77.
- “Editing movie files” on page 77.

Video Quality and Disc Size

Sonic MyDVD includes four DVD video quality (bit-rate) settings, and a Fit-to-DVD option that can be applied to a video project or to individual movie files. The DVD quality settings are:

- **HQ (High Quality)** — Best audio and video quality, but requires the most disc space per second of video. Good choice for video files that contain high-speed action (for example, motor sports).
- **SP (Standard Play)** — Good audio and video quality with most video sources.
- **LP (Long Play)** — Fits approximately twice as much video onto a DVD as HQ. Not recommended when the original video is low-quality or noisy.
- **EP (Extended Play)** — Fits the most video onto a DVD, but video quality is low. Not recommended unless the original video is very good quality.
- **Fit-to-DVD** — As you add more content to the project, MyDVD reduces the project quality automatically to fit the selected disc size. Fit-to-DVD is the default setting for new projects.

NOTE: VCDs have a fixed bit-rate which delivers one quality level. You can fit approximately one hour of video on a VCD (the recording time is reduced if you use animated menu buttons or backgrounds).

NOTE: You can record the same file on a disc at each different speed to compare the results.

DVD Recording Time

The following table lists the approximate DVD-Video recording time for different disc sizes at different video quality settings (your DVD recorder may not support all these disc sizes).

Video Quality	Audio Format	Estimated Time per Disc Size			
		8.5 GB	4.7 GB	2.6 GB	1.4 GB
HQ	Dolby Digital	130 min.	70 min.	40 min.	20 min.
	PCM	110 min.	60 min.	30 min.	15 min.
SP	Dolby Digital	210 min.	120 min.	65 min.	35 min.
	PCM	160 min.	95 min.	50 min.	25 min.
LP	Dolby Digital	310 min.	180 min.	100 min.	50 min.
	PCM	215 min.	125 min.	65 min.	35 min.
EP	Dolby Digital	415 min.	240 min.	130 min.	70 min.
	PCM	265 min.	150 min.	85 min.	45 min.

- The video quality depends on your PC's speed and graphics processing abilities. Some PCs may be unable to capture video at the HQ setting.
- These are estimated recording times. The maximum duration is reduced if you use animated menu buttons or backgrounds.
- To choose the audio format, see "Changing the audio format (DVDs only)" in the online help.
- Your version of MyDVD may not support Dolby Digital audio. See the online Help for details.



Creating Movies Using muvee autoProducer



Creating personalized and professional-looking video movies is simple with muvee autoProducer (select models only).

Basic Steps to Make a Movie

The basic steps to produce a movie with muvee autoProducer are:

- 1 Capture digital video:** Capture live or recorded video to your hard disk drive directly from a compatible digital video camcorder.
- 2 Add videos and pictures:** Select video and picture files from your PC folders. You can easily add videos and still images to your movie production.

You can use these video and still image file types in your movie project:

File extension	File type
.dv	Digital Video
.avi	Audio Video Interleaved
.mpeg-1	Motion Picture Experts Group
.mpeg-2	For DVD video playback
.wmv	Windows Movie Video
.jpg, .jpeg	Joint Photographic Experts Group, still image
.gif	Graphics Interchange Format, still image
.bmp	Bitmap, still image

3 Add music: Select music files on your PC to add to your movie soundtrack. You can use these music file types in your movie project:

File extension	File type
.mp3	MPEG Layer 3
.wav	Windows audio
.wma	Windows Media audio

- 4 Select a style:** Apply a movie style editing template for different effects and picture transitions in your movie.
- 5 Add captions:** Personalize your movie with opening titles and closing credits.
- 6 Make the movie:** Automatically analyze the videos, pictures, music, movie style, and captions you added to your movie and save your movie to your PC hard disk drive, CD, or DVD.
- 7 Burn to disc:** You can burn a video to DVD, VCD, or SVCD.

The following sections contain detailed instructions.

Locating the muvee autoProducer

You can access muvee autoProducer as follows:

Click **Start** on the desktop taskbar and select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer. This version of muvee has more features, such as video capture and disc recording.

See “Using muvee autoProducer” on page 85.

NOTE: To view help files, press the F1 function key on the keyboard.



Using muvee autoProducer






Getting started





To open muvee autoProducer:

- 1 Click **Start** on the taskbar.
- 2 Select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer.

NOTE: You can also open muvee autoProducer from within Digital Media Plus. Select the **Video** tab and then **muvee autoProducer**.

- 3 Open a project by selecting, from the File menu, either **New Project** or **Open Project**.
- 4 Select one of the button options:

Button	Allows you to	See
Get video from camera 	Open the muvee Video Capture window to capture (copy) live video or recorded video.	"Capturing video from a DV camcorder" on page 87.
Add Video 	Open the Add Video window to add existing video files to your project.	"Adding videos" on page 88.
Add Pictures 	Open the Add Pictures window to add existing still image files to your project.	"Adding pictures" on page 89.
Add Music 	Open the Add Music files window to add existing music files to your project.	"Adding music" on page 89.
Select Style	Open the Select Style window to select an editing template for your movie.	"Selecting the style" on page 90.
Change Settings 	Open the muvee Settings window to adjust audio and video production settings for your movie.	"Changing the settings" on page 90.

Button	Allows you to	See
Title/ Credits 	Open the muvee Title and Credits window to type in an opening title and closing credits for your movie.	"Adding an opening title and closing credits" on page 91.
make muvee 	Open the Make muvee window to automatically create and preview the movie.	"Making the movie" on page 92.
Save muvee 	Open the Save muvee window to save the finished movie on your PC hard disk drive in WMV or MPEG formats.	"Saving the movie project" on page 92.
Burn to Disc 	Open the muvee Burner window to record the finished movie in DVD, VCD, or SVCD formats.	"Recording the movie project to disc" on page 93.

Capturing video from a DV camcorder

You can capture (copy) digital video files to your hard disk drive by using muvee autoProducer either:

- **Live** (known as camera mode) using a compatible DV camcorder. See “Capturing live video from a DV camcorder” on page 87.

Or

- **Recorded** (known as VCR mode) using a recorded tape in your DV camcorder. See “Capturing recorded video from a DV camcorder” on page 87.

Captured video files are automatically added to your movie project. To remove the file from your movie project, select the video file in the list of Captured Video Files, and then click the trash can icon.

When capturing video, it is important to be aware of the amount of free space available on your PC hard disk drive. Capturing video can use a large amount of disk space. The amount of free disk space displays on the Capture Video window in muvee autoProducer while you are capturing video.

Capturing live video from a DV camcorder

Capturing live video in camera mode allows you to create a video file without even having a tape in the camcorder.

To capture (copy) live video to your hard disk drive using muvee autoProducer:

- 1 Connect your DV camcorder to the FireWire (IEEE 1394) port on your PC.
- 2 Turn on the camcorder and set to VCR mode. Refer to the instructions in the manufacturer’s documentation.
- 3 Click the **Get Video from Camera** button.
- 4 Click the **Start Capture** button to begin capturing the live image directly to your hard disk drive.
- 5 Click the **Stop Capture** button to stop capturing.
- 6 Click Capture Folder to specify a folder for the captured video file.
- 7 Click Filename to specify a file name for the captured video file.
- 8 Click the **Done** button to automatically add captured video files to your movie project.



Capturing recorded video from a DV camcorder

For best results with muvee autoProducer, capture only video footage that you are most interested in using in your movie project.

To capture camcorder (copy) recorded video to your hard disk drive:

- 1 Connect your DV camcorder to the FireWire (IEEE 1394) port on your PC.
- 2 Turn on the camcorder and set to VCR mode. Refer to the instructions in the manufacturer’s documentation.

- 3 Click the **Get Video from Camera** button.
- 4 Click the **Play** button on the screen to begin viewing the video.
- 5 Click **Start Capture** when you see the start of the video footage you want to use in your movie project.
- 6 Click **Stop Capture** to stop capturing.
- 7 Repeat steps 5 and 6 to capture additional sections of video footage.
- 8 Click the Capture Folder to specify a folder for the captured video file.
- 9 Click Filename to specify a file name for the captured video file.
- 10 Click the **Done** button to automatically add captured video files to your movie project.



Adding videos

To add video files to your movie production:

- 1 Select the **Add video** button in the video/pictures area. The Add Picture window opens.
- 2 Browse the folders.
- 3 Select existing video files on your hard disk drive, if desired for your movie:
 - Add up to three video files.
 - Select multiple video files by pressing and holding Ctrl on your keyboard while selecting the files.
- 4 Adjust the order of the video files by selecting and then dragging and dropping the file. Select the clip, and click the **trash can** icon to remove a video clip from the production.
- 5 You can mark specific scenes in a video clip to include or leave out of your final movie, with the magicMoments feature in muvee autoProducer.



To select video scenes with magicMoments:

- a Select a video file in the Select Video/Pictures window, and then click the **magicMoments** button. The magicMoments window opens.
- b Click the **Play** button to start viewing the video.
- c Use the magicMoment controls to mark video scenes to include and exclude:



- Click and hold down the **green thumbs-up** button to mark scenes that must be included in the movie.
- Click and hold down the **red thumbs-down** button to mark scenes that must be left out of the movie.

- Click or hold down the **gray thumb** button to undo one second of a selected scene. Shift and click to undo scenes that were marked with the thumbs-up or thumbs-down buttons.
- Click or hold down the **arrow** buttons to navigate backward and forward through the video footage.



Video footage left unmarked is still analyzed when you make the movie and may be included in the final version of the movie.

For best results with the production of your movie:

- Keep each magicMoment to less than 10 seconds.
 - Keep the total duration of magicMoments to less than 50 percent of the duration of your movie. It is recommended to select only a few scenes.
- d** Click **OK** when you finish marking scenes. The window closes. Note that the video clip is marked on the lower left side.


Adding pictures

To add still image files to your movie production:

- 1** Select the **Add Pictures** button in the Video/Pictures area. The Add Picture window opens. 
- 2** Browse the folders, as required.
- 3** Select existing still image files on your hard disk drive, if desired for your movie:
 - Add up to 50 .jpg, gif, or .bmp picture files.
 - Select multiple picture files by pressing and holding Ctrl on your keyboard while selecting the files.
- 4** Adjust the order of the picture files by selecting and then dragging and dropping the picture file. Select the picture, and click the **trash can** icon to remove a picture from the production.
- 5** Select the **Rotate Image Clockwise** button to rotate still images. 

Adding music

To add music files to your movie production soundtrack:

- 1** Select the **Add Music** button in the music area. The Add Music window opens. 
- 2** Browse the folders, as required.
- 3** Select existing music files on your hard disk drive, if desired for your movie:
 - Add up to three .mp3, .wav, or .wma files.
 - Select multiple music files by pressing and holding Ctrl on your keyboard while selecting the files.
- 4** Adjust the order of the music files by selecting and then dragging and dropping the file. Select the music, and click the **trash can** icon to remove a music clip from the production.

Selecting the style


The muvee autoProducer program comes with a set of style templates for setting the pace, scene transition effects, and caption fonts. The style you use also affects how muvee autoProducer combines the video, picture, and music files in your movie project to produce the final movie.

For example, using the Cinema style results in a movie that is moderately paced, color enhanced, and uses a wide-screen format.

To select a style, just click on a style from the list. A sample of the style displays in the preview window.

Changing the settings


You can adjust audio and video production settings for your movie.

- 1 Select the **Change Settings** button. The muvee Settings window opens. 
- 2 Select the **Duration** tab to set the length of your video production and preferences. Click one of the following duration settings:
 - **Fit to music.** The produced version may re-use or drop some video and pictures.
 - **Best fit for videos and pictures.** The produced version may repeat or trim music.
 - **User Defined.** Select the duration in minutes and seconds:
 - If the duration of your music is longer than the duration of video and pictures, place a check in the **Allow video and pictures to repeat** check box to repeat video clips and pictures for the full duration of your music files.
 - If the total duration of your video and picture files is longer than the duration of your music, place a check in the **Allow Music to repeat** check box to repeat music for the duration of the video clips.
- 3 Select the **Video** tab to set the video and still image preferences. Click one of the following settings:
 - **Style default.** Use the selected style to sequence still images and video clips.
 - **Keep shots in sequence.** Use the sequence of still images and video clips in the Add Video/Pictures window.
 - **Shuffle shots.** Move the slider bar to determine the frequency of sequencing still images and video clips.
 - Place a check in the **Interleave pictures** check box to blend pictures with video at intervals.

- 4 Select the **Audio** tab to set the sound preferences. Click one of the following settings:
 - **Use all music.** Place a check in the check box to use the sequence of sound files in the Add Music window.
 - **smartJoin™ multiple music files.** Place a check in the check box to automatically remove silence between music tracks.
 - **Normalize music.** Place a check in the check box to automatically adjust audio playback volume to the same level.
 - Move the slider bar to adjust the **Sound mix level** of the music and original soundtrack.
- 5 Click **OK** when you are finished adjusting the settings for your movie project.
Or
Click **Cancel** to not change any settings.

Adding an opening title and closing credits

You can personalize your movie project by adding an opening title and closing credits.

- 1 Click the **Title/Credits** button. The muvee Title and Credits window opens. 
- 2 Click the **Title** tab:
 - a Select a Title effect from the drop-down window.
 - b Type the text you want to appear at the start of your movie in the *Enter your title here* box.
 - c Click the **Use font** button to select the font, style, size, color, and effects from the Font window.
 - d Select a background image for the title.
- 3 Click the **Credits** tab.
 - a Select a **Credits effect** from the drop-down window.
 - b Type the text you want to appear at the end of your movie in the *Enter your credits here* box.
 - c Click on the **Use font** button to select the font, style, size, color, and effects from the Font window.
 - d Select a background image for the ending credits.
- 4 Click **Apply**.
- 5 Click **OK** to close the muvee Title and Credits window.

Making the movie

After you have added at least one video or picture file to your movie project, you can have muvee autoProducer make the movie.

The muvee autoProducer program makes a movie by combining the video, picture, and music files you have selected, along with the style of movie, and puts together all of these pieces into a professional-looking movie with just a few steps.



To make a movie:

- 1 Click the **make muvee** button. Click **OK** as required.
- 2 After making a movie you can preview the movie in the muvee autoProducer Preview window. Use the controls in the Preview window to play, pause, and stop the movie preview:
 - Each time you make a change to a movie project, you need to click the **make muvee** button again to add that change to your movie.
 - You can revise and preview the movie as often as you want to experiment with different styles and the content of the movie.

Saving the movie project

Once you are satisfied with the look of your movie project, you are ready to save it.

You can save the movie to a file on your hard disk drive or create a VCD or DVD disc.

- 1 Click the **Save muvee** button. The Save muvee window opens.
- 2 Choose the movie file type to save to your hard disk drive:
 - **Computer Playback**
 - **E-mail**
 - **DV (camcorder)**
 - **DVD**
 - **VCD (video CD)**
 - **SVCD**
 - **Web Streaming**



Change the video and audio settings of the movie file type as required (advanced users only).

- 3** Click the **Save** button.
- 4** Enter a name for the output movie. Select a folder on your hard disk drive, as required. The movie saves.
 - You can watch the preview as it saves.
- 5** Click the **Save** button.
- 6** Click **Yes** to preview the output file in Windows Media Player.

Recording the movie project to disc

To create a DVD, VCD, or SVCD disc:

- 1** Click the **Burn to Disc** button. The muvee Burner window opens.
- 2** Type the disc title.
- 3** Select the video(s) to burn to the disc:
 - Select the order of the chapters.
 - Add or delete videos, as required.
- 4** Select the disc menu theme from the drop-down list.
- 5** Select the disc.
- 6** Select the type of video disc to create: DVD, VCD, or SVCD.
- 7** Click **Burn Now** to begin burning your movie to disc.
- 8** Click **OK** when the recording is complete. Close the muvee Burner window.



Upgrading muvee autoProducer

You can purchase an upgraded version of muvee autoProducer with the following enhancements:

- mpeg-4, DivX, .mov (Quicktime™) video format support.
- Tiff audio format support.
- You can include up to 75 video and audio clips in your movie production.



Getting Help

Finding Onscreen Guides

The Documentation folder (select models only) in the All Programs menu contains any onscreen guides included with your PC.

To see the items in the Documentation folder:

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **Documentation**.
- 4 Click an item to view it or use it.

NOTE: If there are no guide titles listed in the folder, your PC has no onscreen guides.

Finding Guides on the Web

You can find guides and information for your PC using the Internet to access a Support Web site.

To view information for your PC, go to the Support Web address listed in the *Warranty and Support Guide*, and search for your product name and number. The product number is on the lower front of the PC chassis or is inside the CD storage area.

NOTE: Information and guides are associated with specific PC model numbers. Some models do not have guides or manuals available on the Web site.

Using the Onscreen Help and Support Center

Information about your PC is in the onscreen Help and Support Center (select models only). Here you can find links to driver updates, access to technical support options, and information about commonly asked questions.

To open the Help and Support Center:

- Press the Help button (select models only) on your keyboard.

Or

- Click **Start** on the taskbar, and choose **Help and Support**.

Using Updates from HP

Updates from HP (select models only) is an Internet-based service provided by HP to bring you important information for your PC:

- Product notices
- System updates
- Tips
- Special offers for your PC

Messages arrive while you're connected to the Internet and may display an alert or a notice on your desktop. You can view messages as they arrive, or read them later.

Most Support updates delivered by Updates from HP messages are also available to you through the Support Web site under the information for your PC model.

Getting messages

After you view or close a message, it will not automatically display again.

To read a previously received message, open Updates from HP:

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **PC Help & Tools**.
- 4 Choose **Updates from HP**.
- 5 Click **Updates from HP** again. Updates from HP displays.
 - If Updates from HP has been activated on your system, click **View messages** to view a list of previously-received messages. To read a message, double-click the message title in the window. You can exit this window, and Updates from HP remains active.
 - If Updates from HP has not been activated on your system, the screen contains an **Activate** button to activate the service. Click **Activate** to start the service and view a list of previously-received messages.

Turning off messages

NOTE: You cannot receive Updates from HP messages, including important Support messages that may be critical to the operation of your PC, while the service is off.

To turn off the Updates from HP Service:

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **PC Help & Tools**.
- 4 Choose **Updates from HP**.
- 5 Click **Updates from HP** again. Updates from HP displays.
- 6 Click **Choose preferences** and then **Deactivate** to deactivate the service. The service is turned off until you reactivate it.

Reactivating messages

When you reactivate the Updates from HP service, the service runs whenever you are connected to the Internet, and you automatically receive messages as they become available.

To turn on the service:

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **PC Help & Tools**.
- 4 Choose **Updates from HP**.
- 5 Click **Updates from HP** again. Updates from HP displays.
- 6 Click **Activate** to reactivate the service.

Using PC Help & Tools

The PC Help & Tools folder (select models only) in the All Programs menu contains special utilities for PC owners such as support information and programs.

To see the items in the PC Help & Tools folder:

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs**.
- 3 Choose **PC Help & Tools**.
- 4 Click an item to view it or use it.



Index

Symbols

- .avi 83
- .bmp 83
- .dv 83
- .gif 83
- .jpg 83
- .mp3 84
- .mpeg-1 83
- .mpeg-2 83
- .wav 84
- .wma 84
- .wmv 83

A

- Add Music 85
- Add Pictures 85, 89
- Add Video 85
- Add video 88
- adding files, video projects 75
- adhesive disc labels 68
- Allow Music to repeat 90
- Allow video and pictures to repeat 90
- antivirus, installing program 5
- appending discs 62, 63
- archive files 64
- Audio 91
- audio wizard 18

B

- Best fit for videos and pictures 90
- bit-rate
 - DVDs 80
 - VCDs 80
- Burn to Disc 86, 93
- Burn to disc 84
- burning
 - audio and data files 57
 - CDs
 - archive files 64
 - closed-session 59
 - copying 63
 - data files 62
 - image files 65
 - jukebox 60
 - tips about 59
 - verifying no errors 59, 61
 - data discs 59, 61
 - DVDs
 - archive files 64
 - bit-rate 80
 - Fit-to-DVD setting 80
 - image files 65
 - overview 78
 - quality settings 80
 - verifying no errors 59, 61
 - video quality 80
 - labels, LightScribe 65
 - multiple sessions 61
 - tips, data discs 62
 - VCDs 78
 - video projects to disc 78

buttons

- customizing 9
- E-Mail 8
- Help 7
- HP 7
- Mute 8
- On 3
- Power 3
- Search 8
- special keys 7
- Standby 7
- user 7

C

- cable tunnel 21, 24
- cables, for connecting a TV 33
- camcorder capture 87
- camera docking station 20
- captions 84
- Capture 83
- capturing video
 - in video projects 75
 - requirements 73
- card reader, memory 29
- carpal tunnel syndrome 1
- CDs
 - archive files 64
 - burning tips
 - audio discs 59
 - data discs 62
 - closed-session 59
 - compressed 60
 - copying 63
 - data 62
 - erasing rewritable 58
 - image files 65
 - jukebox 60
 - verifying data integrity 59, 61
- Change Settings 90
- chassis, symbols 2
- closed-session burning 59
- components 3
- compressed CDs 60
- Computer Playback 92
- connecting
 - a TV 33
 - multi-channel speakers
 - 3-connectors 12
 - multi-channel speakers
 - 6-connectors 15

connectors

- cable tunnel 21, 24
- PC back 2
- symbols on chassis 2
- copying CDs and DVDs 63
- country/region codes 54
- creating
 - CDs 57, 65
 - compressed CDs 60
 - data CDs and DVDs 62
 - DVDs 65, 78
 - image files 65
 - jukebox CDs 60
 - music CDs 60
 - VCDs 78
- creating labels 47
- Credits 91
- Credits effect 91
- customizing keyboard buttons 9

D

- data
 - burning in multiple sessions 61
 - CDs and DVDs 62
 - files
 - archiving 64
 - burning tips 62
 - verifying integrity 62
- desktop 6
- digital images, managing 45
- digital picture 29, 45
 - work area 46
- Direct-to-Disc wizards (MyDVD) 74, 79
- disconnecting TV 38
- discs
 - drive compatibility 68
 - erasing rewritable 58
 - features and compatibility 69
 - labeling
 - adhesive 68
 - after burning with iTunes 67
 - with LightScribe 67
- DivX 93
- Documentation folder 95
- double-sided DVD 52
- drive
 - HP Personal Media Drive 39, 42
- driver updates, LightScribe 65
- Duration 90
- DV (camcorder) 92

DV camcorder capture 87
DVD 92, 93
DVD player, multi-channel audio 13
DVDs
 archive files 64
 burning to disc 78
 copying 63
 data 62
 data discs, burning tips 62
 erasing rewritable 58
 image files 65
 movies, creating 73
 quality settings 78
 recording time 81
 supported formats 77
 verifying data integrity 59, 61

E

editing
 video files (MyDVD) 77
E-mail 92
e-mail
 keyboard button 8
Enter your credits here 91
Enter your title here 91
equalizer
 Sound Effect Manager
 (6-connector) 17
erasing rewriteable discs 58
errors
 reducing recording speed 60
 verifying data integrity of data
 discs 59, 61

F

file formats, video 75
files
 adding to partially recorded discs 62
 archive 64
 compressed audio 58
 image 65
 M4A 58
 MP3 58
 supported video formats 75
 verification of data 62
 verify integrity of backups 62
 WMA 58
FireWire 20, 23, 24, 25, 87
Fit to music 90
Fit-to-DVD setting (MyDVD) 80

G

gallery 46
Get Video from Camera 87, 88
Get video from camera 85

H

hard disk drive
 connecting an HP Personal Media
 Drive to the PC 40
Help
 onscreen Help and Support 96
Help and Support 96
Help and Support Center 5
Help button 7
HP Image Zone Plus 45
 gallery 46
 tab definitions 46
HP keyboard button 7
HP Organize 6
HP Personal Media Drive 39
 activity and power lights 41
 automatic on and off feature 40
 disconnecting the drive 43
 inserting a drive 40
 location and drive letter 41
 storing files 42

I

image files 64, 65
installing software programs 5
Interleave pictures 90
Internet
 finding an ISP 4
 keyboard button 8
 organizing destinations 6
 signing up with an ISP 4
InterVideo WinDVD Creator
 see WinDVD Creator 83
iPod, connecting 20
iTunes
 features 71
 labeling with LightScribe 67
 playing music CDs 51

J

jukebox CDs 60

K

Keep shots in sequence 90
keyboard
 customizing buttons 9
 types of buttons 7
 using 7

L

labeling discs
 adhesive labels 68
 burnt with iTunes 67
 with LightScribe 65
LightScribe 47
 backup disc 49
 compatible media 65
 disc labeling 65
 driver updates 65
 labeling iTunes discs 67
 requirements 66
Live video capture 87

M

M4A files 58
magicMoments 88
make muvee 86, 92
manuals, on the Web 95
memory card reader
 card types 29
 using 29
microphone
 6-connector, using 17
 using with multi-channel speakers 13
monitor 3
MOV (Quicktime(TM)) 93
movie making programs 73
MP3 files 58
MPEG4 93
Multi-channel Sound Manager 12
multi-channel speakers 11
 connecting 3-connectors 12
 connecting 6-connectors 15
 selecting for 3-connector PC 12
 selecting for 6-connector PC 15
 using a microphone 13
multistorage bay 22
music 84
 playing with iTunes 51
 playing with Windows Media
 Player 52

music button 7
music CD tips 59
Mute button 8
muvee 83
muvee autoProducer 83
 copying a movie to disc 93
 getting started 85
 making a movie 92
 setting the style 90
muvee autoProducer, features 71
MyDVD *see*: Sonic MyDVD

N

Normalize music 91

O

online help
 Sonic recording programs 76
online manuals 95
onscreen guides 95
optical drive quick reference 70
organizing Internet links and the PC 6

P

PC
 organizing information 6
 setting it up 1
 transferring files and settings to
 new PC 5
 turning on 3
 viewing PC image on TV 34
PC Help & Tools 97
peripherals 3
 docking a device 20, 23
Pictures (Photos) button 7
pictures, managing 45
Preview 92
product notices 96
Project 85

Q

quality settings, recording DVDs 78

R

- RealOne Player, features 71
- Recorded video capture 87
- recording
 - CDs, VCDs, and DVDs see: burning
 - DVDs 83
 - time
 - DVDs 81
 - for each disc size 81
 - VCDs 80
- repetitive strain injury (RSI) 1
- retasking
 - audio connectors 18
- rewriteable discs, erasing 58
- Rotate Image Clockwise 89

S

- Safety & Comfort Guide 1
- safety warnings 1
- Save muvee 86, 92
- Select Style 85
- setting up PC 1
- shortcut icons 6
- Shuffle shots 90
- slideshows in MyDVD 76
- smartJoin multiple music files 91
- software
 - installing 5
- software programs
 - iTunes 71
 - movie making 73
 - Sonic Digital Media Plus 73
 - Windows Movie Maker 2.0 72
 - WinDVD Player 71
- Sonic Digital Media Plus see: Sonic MyDVD
- Sonic MyDVD
 - default verify data setting 59, 61
 - Direct-to-Disc wizards 74, 79
 - editing video files 77
 - erasing discs 58
 - online help 76
 - verifying data feature 61
 - video
 - projects 74
 - quality 80
 - settings (quality) 81

- sound connectors 11
 - 3-connectors PC 12
 - 6-connectors PC 14
- Sound Effect Manager 17
 - audio wizard 18
 - retasking connectors 18
- sound manager, multi-channel,
 - 3-connectors 12
- sound manager, multi-channel,
 - 6-connectors 17
- Sound mix level 91
- speaker system 11
- speakers 11
 - multi-channel 11
- special offers 96
- Standby button 7
- storage
 - multi-storage bay 22
- storing data files 62
- style 84, 90
- Style default 90
- sub-menus in video projects 76
- Support
 - messages 96
- supported
 - DVD formats 77
 - video file formats 75
- SVCD 92, 93
- symbols on chassis 2
- system updates 96

T

- television, viewing PC image on a TV 33
- Tiff 93
- tips 96
- Title 91
- Title effect 91
- Title/Credits 85, 91
- transferring information to your new PC 5
- turning on PC
 - first time 3
- TV
 - connecting 33
 - disconnecting 38
- TV shows
 - copying to CDs or DVDs 83
- TV-out 33
 - cables 33
 - connecting a TV set 33
 - disabling TV option 36
 - viewing PC image on TV 34

U

- Updates from HP, using 96
- updates, LightScribe drivers 65
- updating, system 96
- Upgrading muvee autoProducer 93
- USB
 - connecting an HP Personal Media Drive to the PC 39
- Use all music 91
- Use font 91
- User button 7
- User Defined 90
- user interfaces 74

V

- VCD 93
 - playing with Windows Media Player 55
 - playing with WinDVD 54
- VCD (video CD) 92
- VCDs
 - bit-rate 80
 - burning 80
 - recording time 80
- verify copied data setting 62
- Video 90
- video
 - capturing 73, 75, 79
 - DVD recording times 81
 - editing
 - files (MyDVD) 77
 - projects
 - background music 77
 - burning to disc 78
 - button styles 77
 - capture length 75
 - capturing video 75
 - chapter points 75
 - custom styles 77
 - Direct-to-Disc wizards 79
 - editing 77
 - files (adding) 75
 - MyDVD 74
 - scene detection 75
 - searching for scenes 77
 - slideshowes 76
 - sub-menus 76

- supported file formats 75
- text formatting 77
- transition effects 77
- user interfaces 74
- quality settings (MyDVD) 81
- supported DVD formats 77
- video button 8
- video capture 87
- Video CDs
 - playing with Windows Media Player 55
 - playing with WinDVD 54
- video editing
 - getting started with muvee autoProducer 85
- viewing onscreen guides 95
- volume
 - controls 8

W

- Web
 - guides 95
- Web Streaming 92
- Windows Media Player 93
 - play music CDs 52
 - playing video CDs 55
- Windows Movie Maker 2.0, features 72
- WinDVD 13
 - control panel 53
 - playing DVD movies 52
 - playing video CDs 54
- WinDVD Player, features 71
- wizard
 - audio for Sound Effect Manager 18
- WMA files 58
- working in comfort 1

Part Number: 5991-2461